

AirMobile

VARIABLE-SPEED PORTABLE FAN

Quick-reference guide to...

ASSEMBLY

CONGRATULATIONS!

You've made a great choice with AIR MOVEMENT SOLUTIONS.

Here's how to **GET STARTED** enjoying your fan:

- 1) Unpack the fan by first removing the shipping wrap, cardboard cover, and shipping straps. Then, flatten the cardboard cover and lay it next to the fan's shipping pallet, to protect the fan and floor during assembly.
- 2) Inspect the safety grate for movement during shipping and adjust it, if necessary, to ensure that there is approximately 1" of clearance to the blades all the way around.
- 3) Remove the bolts securing the fan to the shipping pallet, roll the fan onto the cardboard, and secure it from rolling further to allow for installation of the caster wheels.
- 4) Locate and unpackage the wheels and fasteners. Then, securely attach the wheels to base of the fan.
- 5) Lock the wheels so that they will not roll when the assembly is righted, then roll the fan upright onto the wheels.
- 6) Check that the fan blades spin freely and are unobstructed during rotation.
- 7) Plug the VFD directly into a 20-amp max. 120V/1P non-GFCI-protected power outlet and test the operation of the fan. A GFCI will interfere with the VFD and the fan will not function properly. If an extension cord must be used, employ 14/3 cable of the shortest length possible. Operating with reduced voltage will reduce product life.

NOTE: Throughout the life of the fan, clean the fan blades periodically to maintain the fan's efficiency.

For technical assistance, please contact AIR MOVEMENT SOLUTIONS at 1(888)319-1626 or go to www.AMSfans.com for more information.

