


# Installation & Operation Manual

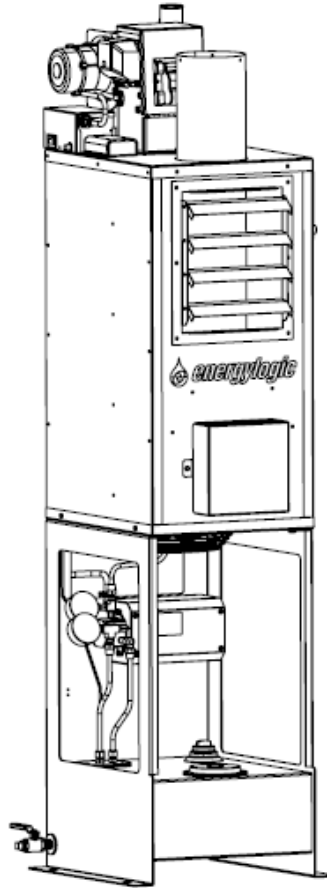

## Multi-Fuel Waste-Oil Heater

Model 75H

115V/60Hz



Designed to save. Built to last.™



# Caution!

**Before you begin installation and operation of your heater, read this manual completely, and save it for future reference!**

**IMPROPER INSTALLATION, OPERATION, OR MAINTENANCE OF THE HEATER SYSTEM CAN CREATE HAZARDOUS CONDITIONS AND WILL VOID THE WARRANTY AND U.L. LISTING.**

- This heater is UL listed for commercial and industrial use only.
- Refer to safety information and precautions in this manual.
- Installation of the unit shall be made in accordance with all state and local codes which may differ from information provided in this manual. Installations in Canada shall be in accordance with the regulations of authorities having jurisdiction and installation practice shall be made according to CSA standard B139, Installation Code for Oil Burning Equipment.
- Product improvements are occurring regularly, so the products may vary slightly from what is shown in this manual.
- If you have any questions or concerns during the installation or operation of the heater, contact your local service representative or EnergyLogic.

Thank you for purchasing an EnergyLogic heater. Record your Unit I.D. number below for future reference. Please register your unit to activate the warranty by visiting EnergyLogic's website at [www.energylogic.com/register](http://www.energylogic.com/register) or clicking the QR code. If you have any issues with registering, please contact us at the number below.

**Unit I.D. #:**

(Number located on the side of the cabinet)

**Installed By:**

(Service Company, Address, Contact Name, Phone Number)



**Date of Installation:**

---

# Table of Contents

- Before You Begin... ..... i
- 1. Safety, Codes and Regulations..... 1**
  - 1.1 General Warnings ..... 1
  - 1.2 Safety Hazards..... 2
  - 1.3 Codes and Regulations..... 4
  - 1.4 Fuels and Fuel Management..... 5
  - 1.5 Clearances to Combustible Surfaces ..... 6
- 2. Assembly and Installation ..... 7**
  - 2.1 Heater Assembly..... 7
  - 2.2 Heater Placement ..... 10
  - 2.3 Drain Valve Installation ..... 11
- 3. Exhaust Flue System Installation ..... 12**
  - 3.1 Barometric Damper Tee Installation ..... 12
  - 3.2 Flue Piping Installation ..... 12
  - 3.3 Draft Gauge Installation..... 15
- 4. Electrical System Installation..... 16**
  - 4.1 Wall Thermostat (Standard) ..... 16
  - 4.2 Main Electrical Connection..... 17
- 5. Startup and Operation..... 18**
  - 5.1 Do's and Don'ts/Tech Tips ..... 18
  - 5.2 Burner Primary Control Operation ..... 18
  - 5.3 Safety Systems and Warnings ..... 19
  - 5.4 Heater Startup..... 21
    - 5.4.1 Priming and Starting the Heater ..... 21
    - 5.4.2 Burner System Checkout ..... 22
  - 5.5 Everyday Operation of Your Used Oil Heater ..... 25
- 6. Maintenance..... 26**
  - 6.1 Service Contracts..... 26
  - 6.2 Safety Warnings – Lockout/Tagout..... 26
  - 6.3 Monitoring System Performance over Time..... 26

6.4	Maintenance Procedures .....	27
6.4.1	Heat Exchanger Cleaning .....	28
6.4.2	Fan Cleaning.....	30
6.4.3	Nozzle Line Assembly Cleaning .....	31
6.4.4	Air Compressor Maintenance .....	35
6.4.5	Oil Filter Cleaning.....	37
<b>7.</b>	<b>Troubleshooting .....</b>	<b>38</b>
7.1	Troubleshooting Table .....	40
<b>8.</b>	<b>Appendices .....</b>	<b>42</b>
8.1	Wiring Diagrams .....	42
8.2	Primary Control Instructions .....	45
8.3	Chimney Flue Installation Instructions .....	49
8.4	Heater Specifications .....	53
8.5	75H Heater Maintenance Schedule and Log .....	54
8.6	Limited Warranty .....	55

# 1. Safety, Codes and Regulations

Thank you for the purchase of an EnergyLogic used oil heater. EnergyLogic heaters are designed and tested for safe, reliable long-term operation. However, proper installation, fuel quality control, and regular maintenance are required. Please read and understand this manual completely before attempting to install, operate, or service the heater. Post this instruction manual and maintain it in legible condition. If you have any questions, call your local service provider or the number below for EnergyLogic Technical Service.

## 1.1 General Warnings

- **▲ WARNING** Do not use this product where gasoline vapors or other explosive vapors may be present.
- **▲ WARNING** Do not use this product near sources of heat, sparks or open flames.
- **▲ WARNING** The EnergyLogic burner is to be used only in the EnergyLogic heater provided. Do not attempt to use the burner for other purposes.
- **▲ WARNING** All components of your heater are factory-tested to ensure proper operation. Do not tamper with the unit or controls – call your service technician.
- **▲ WARNING** Do not attempt to use unit with broken or damaged components.
- **▲ CAUTION** This heater is not designed for use with ductwork.
- **▲ WARNING** Do not allow unqualified personnel to install or service the heater, electrical system, or flue system. Contact EnergyLogic for help with finding a qualified installation and service company. Failure to install and maintain your heater properly will void your warranty and the UL listing.
- **▲ WARNING** Do not attempt to start the burner when excess fuel has accumulated inside the heat exchanger, when the heater is full of vapor, or when the combustion chamber is very hot.
- **▲ WARNING** Do not start the burner unless all cleanout panels are secure in place.
- **▲ CAUTION** Turn off power to the burner when it will not be used for extended periods (weeks). Wait 10 minutes after power has been restored for the oil to heat up, prior to turning the thermostat up and starting the heater.
- **▲ WARNING** The heater is designed to be installed on non-combustible flooring. It should be bolted down to prevent tipping or movement that could cause the flue pipe to come loose.
- **▲ CAUTION** Used oils contain heavy metallic compounds and foreign materials. When burned, these compounds are emitted from or deposited within this heater appliance and therefore care should be taken when using, cleaning and maintaining this equipment.
- **CAUTION** EnergyLogic recommends that the building have a secondary heat source during times the heater is down for maintenance or service. Used oil heaters require maintenance. Also, used oil may sometimes be unavailable or burn poorly due to contaminants in the oil. The heat from the secondary heater should be directed away from the heater.

## 1.2 Safety Hazards

There are potential hazards associated with operation of this or any heater. In addition to the codes and regulations listed in the following section, general safety rules and the precautions should be followed at all times to prevent accidents that could lead to personal injury, death, or property damage. Only those qualified should perform the tasks. Specific safety hazards include:

### **▲ DANGER**

**Electricity:** The EnergyLogic heater operates on 115V/60Hz – single phase electrical power. Always supply power through a hard-wired connection (3 wires: line, neutral and ground), 14 AWG minimum wire size (copper conductors only) protected by a 10 Amp circuit breaker (15 Amp Max).

*Electricity is very dangerous. The wiring must be installed by a qualified electrician. In the U.S., consult the National Electric Code (NEC) and local building codes for additional requirements. In Canada, consult the Canadian Electrical Code, Part I.*

Turn power off at the circuit breaker and lock it out prior to performing any work on the heater system or any of the components. Make sure covers are in place during normal use.

### **▲ WARNING**

**Liquid Fuels:** Used oils must be handled properly to prevent spills. Uncontained oil leaks may contaminate the local water supply. Ensure that all national and local codes are followed in regards to the requirements for spill containment and SPCC paperwork. Fuel leaks pose slip/fall hazards, and pose a risk for fires. **DO NOT USE GASOLINE OR ANY OIL CONTAINING GASOLINE.** Do not add any cleaning fluids or oil additives to the used oil burned in this appliance. The use of unauthorized fuels will void the warranty and U.L. listing. See section 1.4 for a list of allowable fuels. The end user of the heater is responsible for ensuring that all correct precautions are taken in managing their used oil.

### **▲ WARNING**

**Combustion Exhaust Gases:** The exhaust products from the combustion are dangerous to breathe. The heater must be attached to a flue which properly vents the exhaust out of the building to the atmosphere at all times, to assure safe and proper operation of the burner. If proper draft cannot be established, changes to the building construction or a draft inducer will be required in order to provide adequate make-up air.

### **▲ CAUTION**

**Safe Maintenance:** Used oil contains mineral additives and deposits called “ash” that will not burn. Ash collects in the heater and flue with regular use over time. Ash must be cleaned out of the combustion chamber/heat exchanger and flue pipe on a scheduled basis.

Follow the minimum maintenance instructed in section 6. Wear proper protective clothing; including gloves and face mask or respirator whenever any cleaning is performed, including the cleaning of the heat exchanger, flue piping and exhaust stack.

**⚠ WARNING**

Vapor/Dust Ignition: Do not store or use gasoline or other flammable liquids or vapors near this heater, as they may be ignited by the burner. Do not operate the heater in dusty or otherwise dangerous environments.

**⚠ WARNING**

Flammable liquids: Do not create a fire or explosion hazard by using or placing flammable liquids such as gasoline or solvents near the heater. A flammable liquid is any liquid that has a closed-cup flash point below 100°F (37.8°C), as determined by the test procedures and apparatus set forth in 1.7.4 of NFPA 30.

**⚠ WARNING**

Minimum Clearance – Safe clearance to combustibles (Section 1.5) shall be adhered to.

**⚠ WARNING**

Height, Weight, Guarding and General Safe Practices: The flue pipe for these heaters are installed at heights which pose a risk for injuries due to a fall. Many of the components are heavy, and pose the risk of injury with improper lifting and handling. Always follow safe practices and use proper equipment. Never climb on the equipment. Do not take risks when installing or servicing the equipment. All cover plates, enclosures, and guards must be maintained in place at all times, except during maintenance and servicing. Failure to observe general safety rules and to follow safety rules specific to the tools and equipment used or being worked on may result in product/property damage, personal injury or death.



### 1.3 Codes and Regulations

The installation, operation, and maintenance of the heater system in the United States must be performed by qualified personnel in accordance with this manual and all national, state, and local codes / regulations, as well as the following standards of the National Fire Protection Association (NFPA):

NFPA 31	Standard for the Installation of Oil Burning Equipment
NFPA 30	Flammable and Combustible Liquids Code
NFPA 30A	Code for Motor Fuel Dispensing Facilities and Repair Garages
NFPA 70	National Electric Code
NFPA 88A	Standard for Parking Structures
NFPA 88B	Standard for Repair Garages
NFPA 211	Standard for Chimneys, Fireplaces, Vents and Solid Fuel Burning Appliances

These standards are available from the NFPA at [www.nfpa.org](http://www.nfpa.org).

Similarly, the installation, operation, and maintenance of the heater system in Canada must be performed by qualified personnel in accordance with this manual and in accordance with all the regulation authorities having jurisdiction, as well as CSA Standard B 139, Installation Code for Oil Burning Equipment. Electrical installation in Canada shall be in accordance with the Canadian Electrical Code, Part I. CSA standards are available at [www.csa.ca](http://www.csa.ca).

A qualified installer is an individual or agency who is responsible for the installation and adjustment of the equipment and who is properly trained and licensed to install oil burning equipment in accordance with all codes and ordinances.

In the United States, make sure you comply with all EPA regulations concerning the gathering and storing of used oil, and operation of the heater. Specifically, CFR Title 40 Part 279 covers managing used oil. As well, make sure you comply with local codes and regulations.

In Canada, only used oil generated on the premises of the owner may be used in this equipment unless written authorization is obtained from the regulatory authority. Comply with Canadian regulations regarding the management and storing of used oil, as well as any local codes and authorities having jurisdiction.

## 1.4 Fuels and Fuel Management

The heater system is composed of several components and subsystems that work together for efficient and safe operation. In order for the system to function as designed, good fuel management practice must be followed.

The 75H heater is listed by Underwriters' Laboratories (U.L.) for the U.S. and Canada, operating on the following fuels:

- Used Crankcase Oil.
- Used Automatic Transmission Fluid.
- ASTM D396 No. 2 Fuel Oil.



DO NOT USE GASOLINE OR ANY OIL CONTAINING GASOLINE.

Fuel mixtures must have a minimum flash point of 140°F (60°C) and a maximum flash point of approximately 400°F (204°C). **NOTE:** A flash point below 400°F does not guarantee that the oil will burn successfully in the heater.

**⚠ WARNING** **Never** mix inappropriate or hazardous material with the used oil. Examples of substances that should never be added include but are not limited to:

- New Crankcase Oil (Oil that has not been substantially used will not burn well, especially synthetic oils.)
- Gasoline/Kerosene
- Brake Fluid/Power Steering Fluid (May contain boron that can cause sludge formation.)
- Hazardous Waste
- Anti-freeze/Water
- Carburetor Cleaner/Solvents
- Paint Thinner/Naptha
- Any Chlorinated Material
- Oil Additives
- Animal Fats
- Vegetable/Cooking Oils


**⚠ WARNING** *The addition of inappropriate substances to the fuel is not approved and can lead to poor equipment performance, premature product failure, and/or explosive/hazardous conditions. Burning of fuels that contain unapproved substances will void the product warranty and the UL listing. If you have any question about what is contained in your used oil, it is your responsibility to have the oil analyzed prior to burning.*

Contact Technical Support at the number below if you have questions about a particular fuel type, or if you need fuel analysis. For a nominal fee, Technical Support will provide a professional fuel analysis. You will be provided with instructions in order to collect an oil sample to be sent out for analysis.

## 1.5 Clearances to Combustible Surfaces

**⚠ WARNING** It is of the utmost importance that the installation conforms to the minimum clearances to combustible surfaces (Material made of or surfaced with wood, compressed paper, plant fibers, plastics, or other material that can ignite and burn, whether flame proofed or not, or whether plastered or unplastered). Consult applicable codes and regulations for precedence. Non-compliance to minimum clearances may result in fire, explosion, personal injury or death. Minimum Clearances per U.L. Listing:

Front - 24", Sides - 18", Rear - 6", Flue Pipe (Single Wall) - 18"

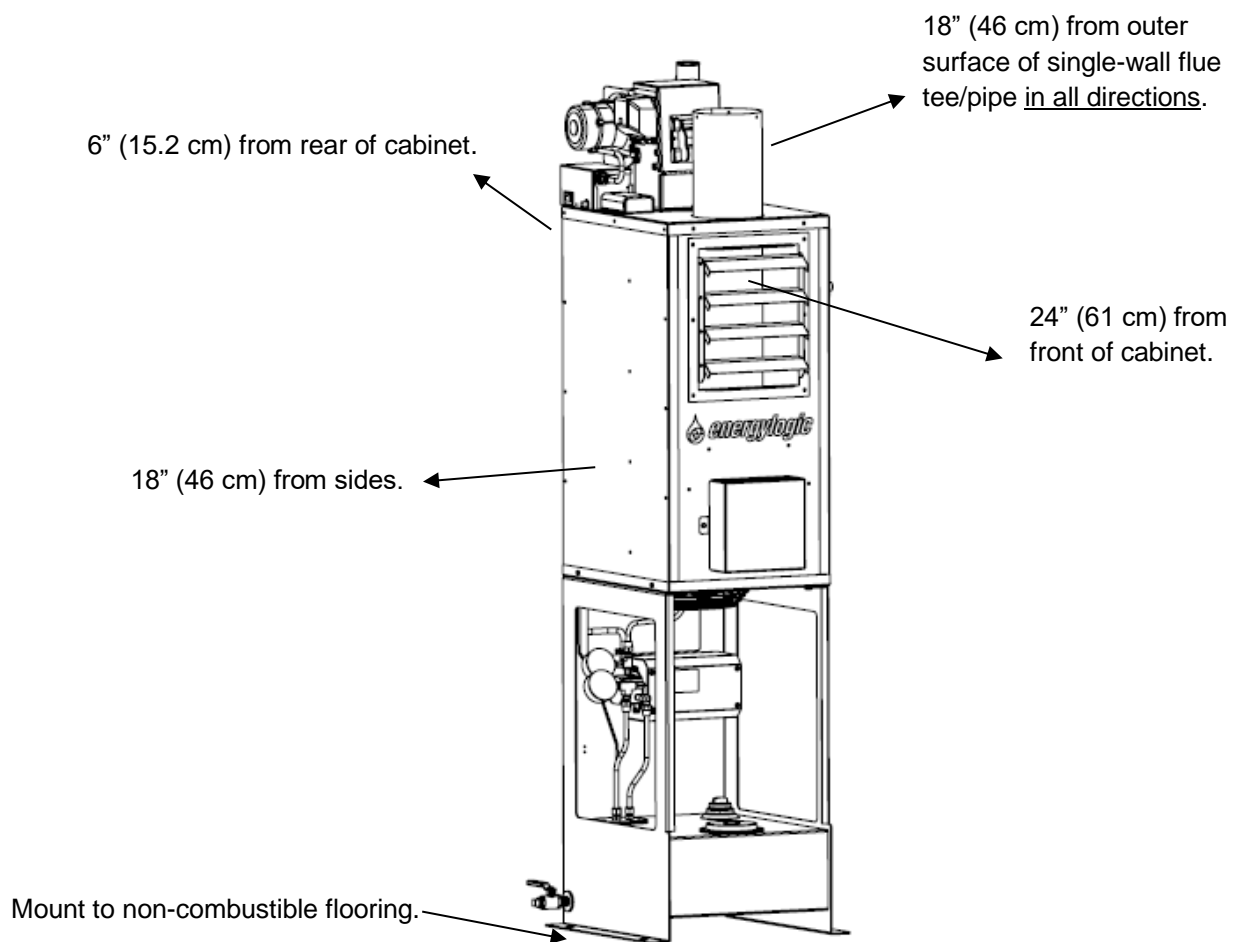

Minimum Clearances to Combustible Surfaces

NOTE: These are the minimum allowed clearances for fire safety. Leaving additional access space around the unit will make periodic maintenance easier.

## 2. Assembly and Installation

---

EnergyLogic heaters are designed to operate reliably over a wide range of conditions. However, proper installation is required to prevent problems and unnecessary rework.

**⚠ WARNING** Handle with Care – This equipment is heavy and has sharp edges, etc. Please use safe practices for lifting and moving the equipment to avoid personal injury or damage.

### 2.1 Heater Assembly

The 75 heaters are shipped in two main sections to reduce storage space requirements and help prevent shipping damage. The sections must be assembled together as detailed below before installing the heater.

1. Unpackage and remove the heater components from the skid. The heater itself is in two large sections as shown in Figure 2.1 below:
  - The base assembly (tank, pump, and fan). Note that the wire harness is attached to this section (not shown). It is partially boxed and located on top of the tank. Leave it in the box until needed to avoid damage.
  - The top assembly (heater cabinet and burner).

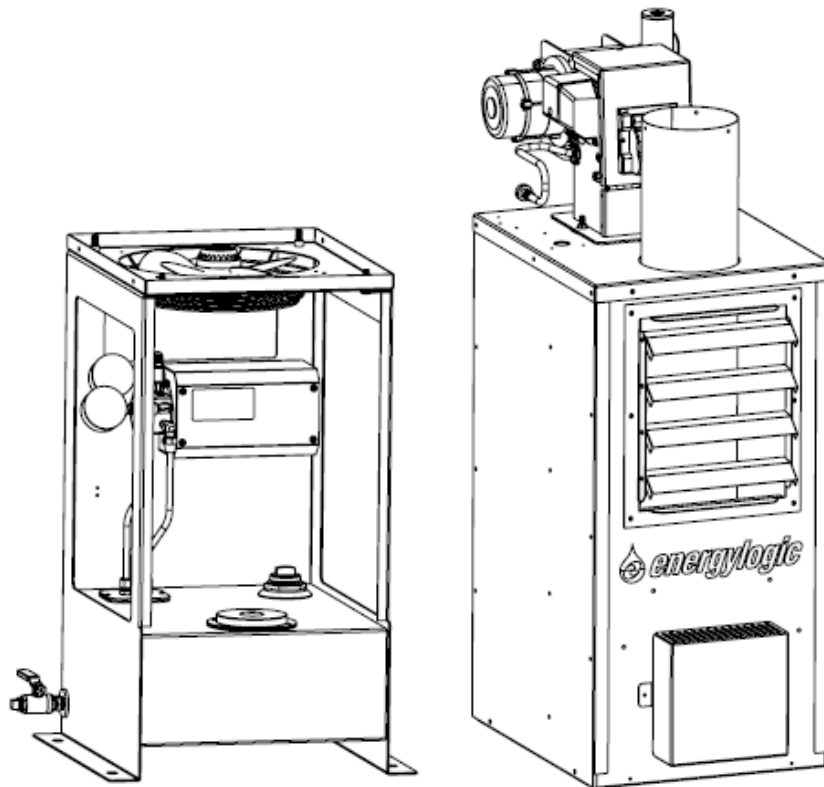


Figure 2.1 - Pre-Assembled Sections

2. Place the base assembly on solid flooring, near its final location.

3. Remove the four ¼-20 screws from the bottom sides of the cabinet using a 7/16" nut driver or wrench. Set them aside for use later. (Refer to Figure 2.2 below.)
4. Using a partner, carefully lift the top assembly and place it into the top of the base assembly. **CAUTION** Lift by the clean out covers on the front and back of the cabinet. Do not grab under the cabinet to avoid pinching your fingers. To prevent damaging the fan, start by inserting the front corner of the cabinet in the base and then tilting it back into place. Secure with the four screws removed previously. Do not overtighten.

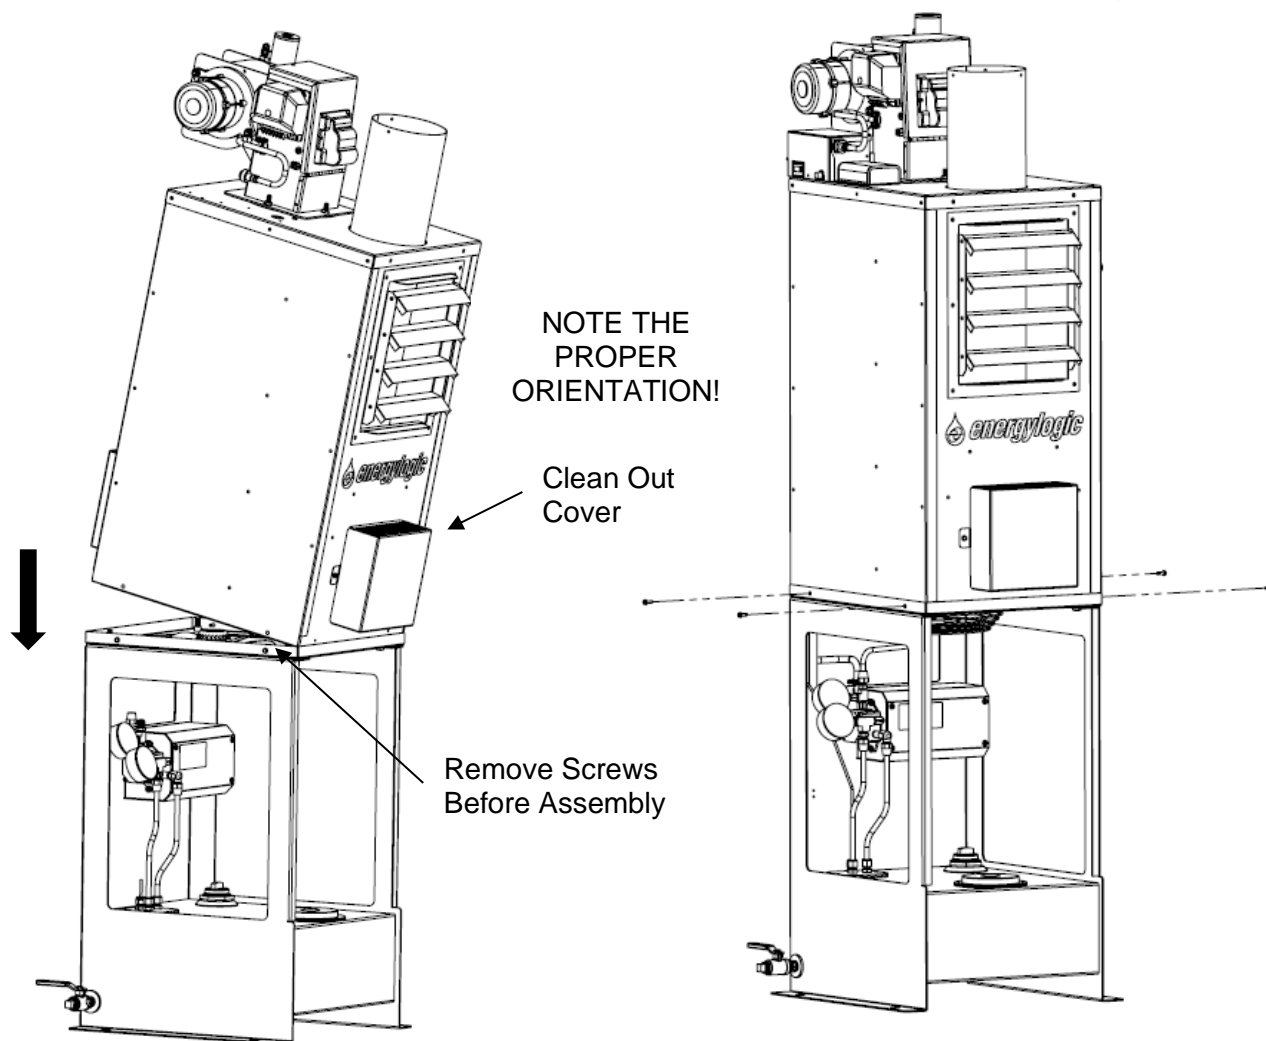


Figure 2.2 – Assemble the Sections

5. Unpackage the wiring harness assembly from the box on the tank and route the flex conduit and cable up the back of the cabinet. Locate the wiring box and Fan & Limit Switch on top of the cabinet as shown in Figure 2.3 on the following page. NOTE: The shaft on the Fan & Limit Switch slides into the hole in the top of the cabinet.
6. Remove the covers from the wiring box and Fan & Limit Switch. NOTE: You have to squeeze the sides of the Fan & Limit cover and slide it up to remove it. Be careful not to disconnect any wires.
7. Secure the wiring box and Fan & Limit Switch to the top of the cabinet using five sheet metal screws provided.

- Secure the conduit and grey cord to the back of the cabinet with the clamp provided.

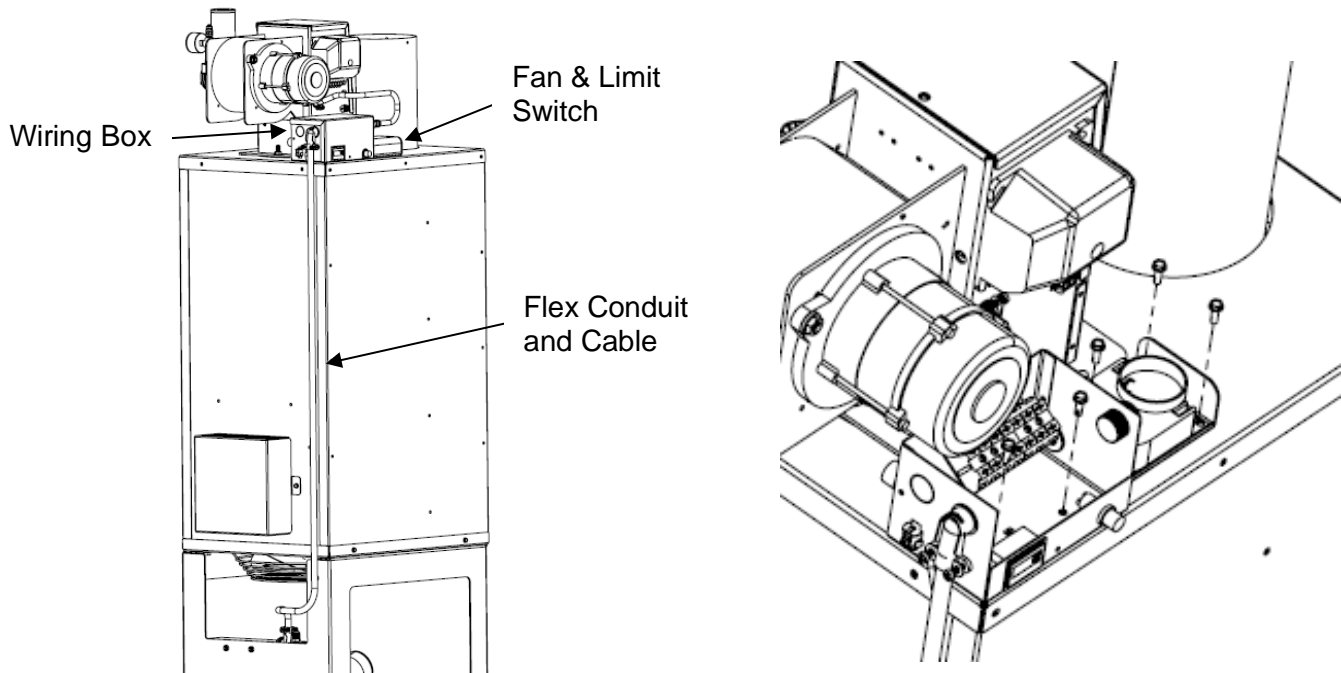


Figure 2.3 – Installing the Wiring Harness

- Locate the coiled up 3/8-inch diameter copper tubing.
- Remove the red cap from the fitting on the top of the pump assembly and loosely thread the flare fitting on the bent end of the copper tubing to it.
- Unroll and route the tubing around the Clean Out Cover and up the back side of the Cabinet to the inlet elbow fitting on the side of the burner. Refer to Figure 2.4. NOTE: Be careful not to kink the tubing.
- Remove the red cap from the elbow fitting. Loosely thread the flare fitting onto it. NOTE: The elbow fitting should be oriented in the 4 to 5 o'clock position.
- Tighten both end fittings with a 3/4-inch wrench. Use a second wrench to prevent the mating fittings from moving. Do not overtighten.

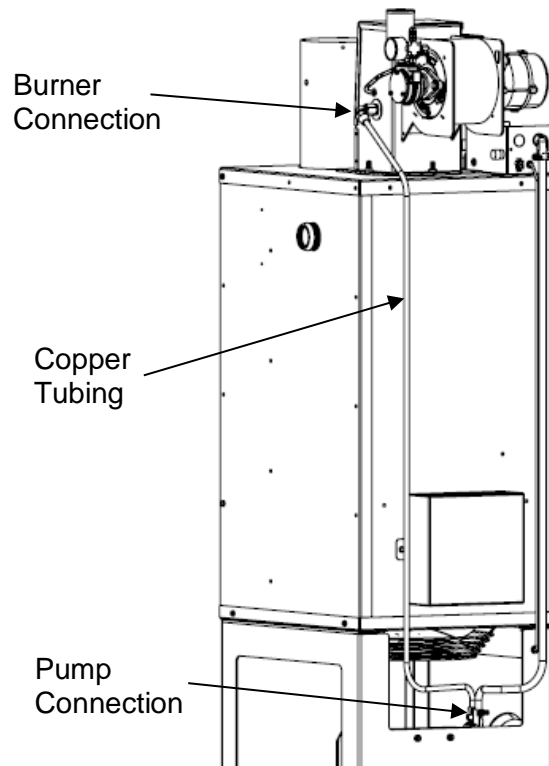


Figure 2.4 – Installing the Fuel Tubing

## 2.2 Heater Placement

It is important to plan the heater and flue prior to installation.

1. Locate the heater indoors, in a dry area, with the louvers pointed into the center of the space to be heated. The heater is not designed to be used with ductwork.
2. Maximize the vertical run of flue and avoid turns and horizontal runs to allow the hot exhaust gas to rise naturally out of the building.
3. Allow access space for cleaning ash out of the heater and flue.
4. Mount the wall thermostat to an interior wall. Do not allow it to hang by the wiring harness. Do not mount it to the heater cabinet.

**Electrical Wiring** - Will the layout of your building allow safe routing and installation of electrical wiring to the heater? Check national and local building codes.

**Flue Pipe** - Is ceiling/roof or wall location suitable for a flue pipe to pass through? Are any obstacles or flammable materials present at interior or exterior locations? Check your roof warranty about penetration for the flue pipe. Check your local building and fire codes.

**Combustion and Make Up Air Requirements** – Ensure that adequate air for safe combustion is provided for all fuel-burning appliances and equipment in the space. Do not locate the heater in a small, enclosed space, such as a closet. Refer to NFPA 31, chapter 5 for requirements. In Canada, reference CSA Standard B139/CGA B149.

**Minimum Clearance** –

**▲ WARNING** *Safe clearances to combustibles (Section 1.5) shall be adhered to.*

**Distance from Flammable Liquids** –

**▲ DANGER** Do not create a fire or explosion hazard by using or placing flammable liquids such as gasoline or solvents near the heater. *A flammable liquid is any liquid that has a closed-cup flash point below 100°F (37.8°C), as determined by the test procedures and apparatus set forth in 1.7.4 of NFPA 30.*

POWER TO THE HEATER SHOULD BE SHUT OFF ANYTIME FLAMMABLE VAPORS MAY BE PRESENT!

**Access** - Position the heater where there is adequate clearance for operating and maintaining the unit. Leave an unobstructed path for shop vehicles and equipment. Consider access needed for service (heat exchanger cleaning, flue cleaning, removal of caps and baffle, burner access, etc.).

**Cabinet Orientation vs. Air Flow Direction** – Consider the workspace to be heated. Consider proximity to windows, doors, etc.


**Structural Requirements (Canada)** – In Canada, the structure in which the used oil burning appliance is housed shall be no less than 4.6m (15ft) high at the point where the appliance is situated and have a minimum length and width of 6m (20ft) and a minimum floor area of 37m<sup>2</sup> (400ft<sup>2</sup>). In addition, the installation including flue stack height requirements and distance from property line shall be in accordance with the authorities having jurisdiction concerning environmental quality as well as fuel, fire, and electrical safety and Table 7 in CSA B140.0-03 (clause 22.3.2).

**⚠ WARNING** Do not attach or install ductwork to the outlet of the heater cabinet.

## 2.3 Drain Valve Installation

The drain valve and fittings are not installed at the factory to prevent damage during shipping. Install the drain valve in the port on the side of the tank as shown in the figure. Use the thread sealant provided. Do NOT use Teflon tape.

**CAUTION** *The drain valve is necessary for draining water from the bottom of the tank. The drain valve is shown in closed position in figure. The plug should be installed in the drain valve to prevent spills if the valve is accidentally opened.*

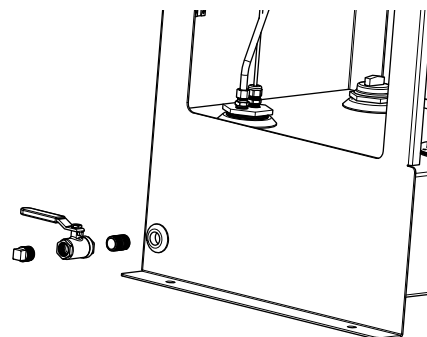




# 3. Exhaust Flue System Installation

The exhaust system is critical for the safe operation of the heater, as it exhausts the products of combustion out of the building into the ambient environment. Because the exhaust gas is much hotter than the outside air, it will naturally rise through the flue and create a negative pressure behind it. This is commonly called “draft”. Refer to Section 8.3 for additional information if you purchased the “Through-the-Roof” Flue Kit.

## 3.1 Barometric Damper Tee Installation

The barometric damper tee helps to regulate draft pressure through varying ambient conditions. Install the tee with the tapered end pointing downward by sliding it into the heat exchanger outlet until snug (refer to figure). Secure using 3 sheet metal screws. **⚠ WARNING** Do NOT operate the heater without a Tee and Damper for draft control.

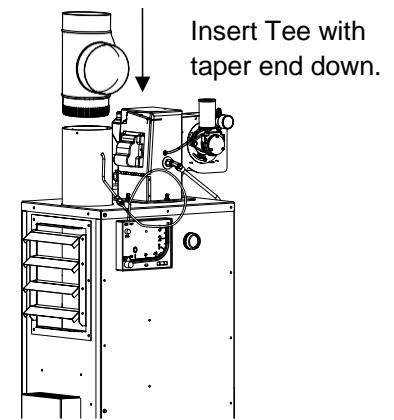

Damper Tee Installation

## 3.2 Flue Piping Installation


The flue piping exhausts products of combustion out of the building into the ambient environment.

**⚠ WARNING** *You may have a basic knowledge of carpentry and the use of hand tools. However, it is important that you review all safety rules in this section, and all safety rules in the manuals provided with your manufactured flue kit. If you have any doubt about your ability to complete the installation in a safe and workmanlike manner, you should arrange for a professional installation. For more regulatory information regarding flue pipe installation, consult NFPA 31 and your local fire protection and building codes.*

### Flue System Installation Steps and Considerations:

- Review this section completely. Choose and purchase a factory-built flue kit that complies with U.L. standard 103 Type HT, or Equivalent.
- The 75H requires a 6-inch diameter flue and may not be reduced.
- For your convenience, the unit includes some helpful chimney-flue material. Additional material will also be necessary.
- **⚠ WARNING** Read and follow the product and safety instructions in the Appendix of this manual or those that were included with your selected flue kit. If product instructions were not included, contact the manufacturer of your kit to obtain the instructions. Additional support material and videos are available at EnergyLogic.com. If you are unsure of your ability to properly install the flue system, hire a professional installer or contact EnergyLogic for assistance.

- Contact your local building or fire officials about restrictions and an installation inspection.
- Run the flue vertical from the damper tee out through the roof. If this is not possible, two offsets (30° maximum) are allowable for U.L. 103 Listed Flue Kits (refer to figure).

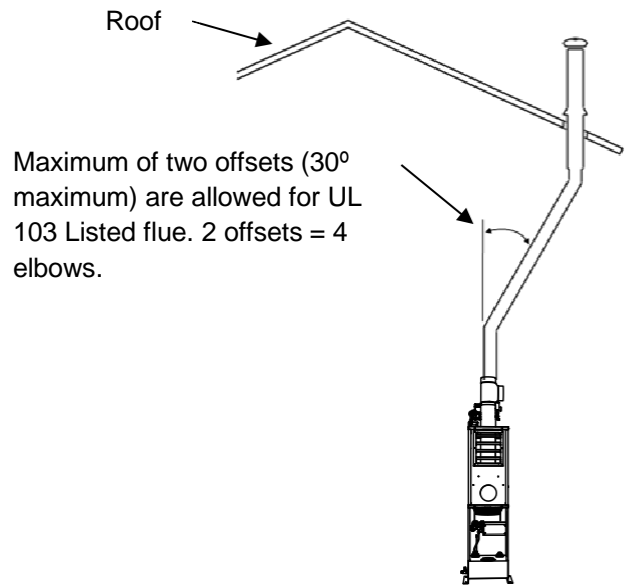


Offset in flue stack

- **⚠ WARNING** Single wall flue (minimum wall thickness of 24 Gauge steel) may be used in heated space, but must be kept a minimum distance (air space only) of 18 inches (46 cm) from combustible surfaces (check building and fire codes for precedence). ANY PORTION OF THE FLUE SYSTEM THAT PASSES THROUGH UNHEATED SPACE / CONCEALED AREAS AND ANY PORTION OUTSIDE THE BUILDING IS TO BE CLASS-A DOUBLE WALL FACTORY-BUILT FLUE THAT IS APPROVED TO STANDARD U.L. 103, OR EQUIVALENT. Refer to the manufacturer’s instructions on the minimum clearance required for the double-wall product used. Install flue system per the flue manufacturer’s instructions, making sure to fully comply with national safety standards such as NFPA 31, 54, and 211. Refer to fire and building codes for further requirements.

**⚠ DANGER** Improper installation of the flue system could result in property damage, serious injury or death.


- Whenever possible, avoid 90-degree elbows and horizontal runs, as these will collect ash and require regular cleaning.
- Properly support the flue stack. Do not rely on the heater to support the total load of the flue system. Follow the flue manufacturer’s instructions for support kits.
- Use a dedicated flue system for each appliance. Do not share a flue system with another appliance or fireplace.
- The flue is required to extend at least 3 feet above the highest point where it passes through the roof of a building, and at least 2 feet higher than any portion of a building within 10 feet (NFPA 31, 54 and 211 – see figure). For increased margin, EnergyLogic recommends extending the flue further than the minimum guidelines.
- Minimum stack height: 10 feet, plus 1 foot for each additional tee or elbow. Refer to local codes, which may require additional stack height based on BTU input.

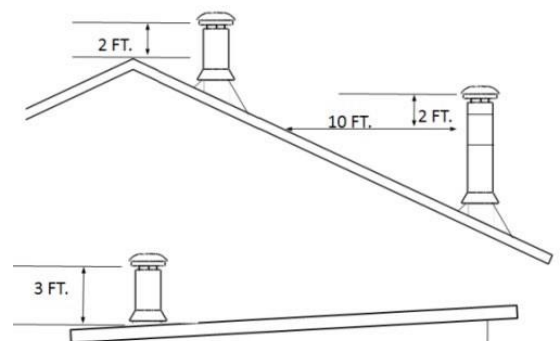

NFPA rules for flue height above roof

- In Canada, installation including stack height requirements and distance from property line shall be in accordance with the authorities having jurisdiction concerning environmental quality as well as fuel, fire, and electrical safety and Table 7 in CSA B140.0-03 (clause 22.3.2).
- Terminate the flue pipe with an all-weather wind cap.
- During start up (section 5), you will verify that the flue system (along with conditions inside the room or building) provide for adequate draft.

**⚠ WARNING** Do not operate your heater if you cannot achieve proper draft. Contact EnergyLogic Technical Service for assistance.

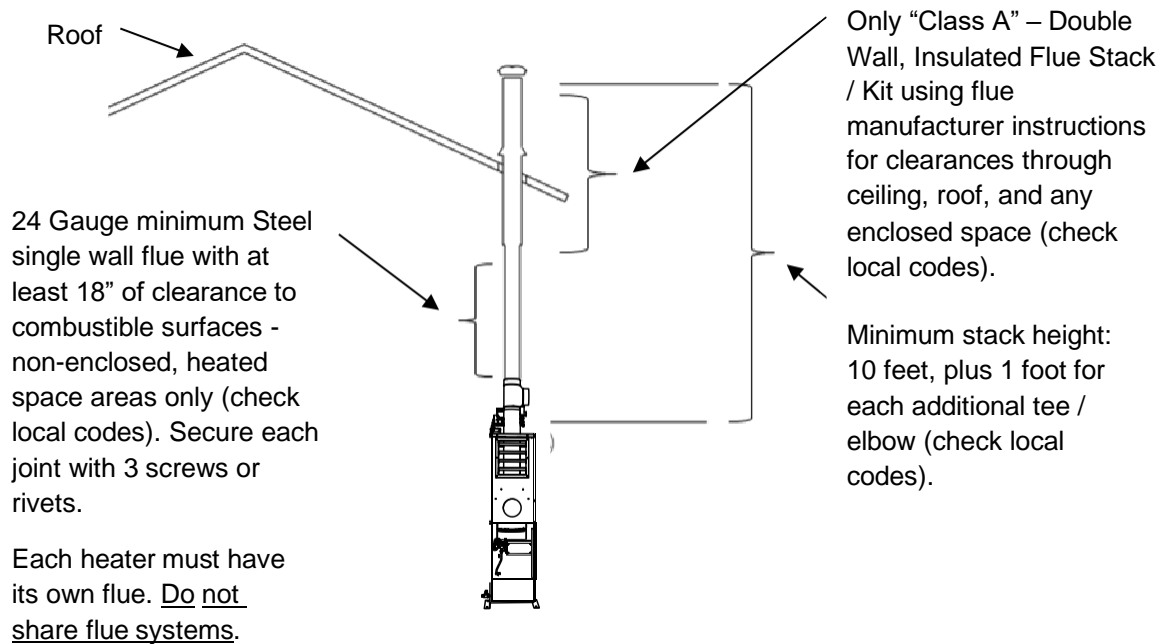

#### Installation of Vertical Flue


**⚠ WARNING** A negative pressure inside the building may impede intake of combustion air to the burner, which may result in a hazard from smoke inhalation and/or fire. Use of exhaust fans in your shop without adequate make-up air may create a negative pressure. There are other possible causes as well. Corrective measures must be taken before operating the appliance if the correct draft setting cannot be achieved. Contact EnergyLogic or consult a local professional for assistance.

### 3.3 Draft Gauge Installation

The draft gauge is a precision inclined-vertical manometer. Permanently installing the draft gauge allows you to monitor the draft during operation.

#### Installation

14. Mount and level the draft gauge to the heater cabinet using the screws provided with the gauge (refer to figure). **Note:** There is a level built into the gauge.
15. Turn Zero Adjustment Knob clockwise until it stops, then turn counterclockwise (3) full turns to allow for future adjustment.
16. Remove gauge Fill Plug and open red fluid bottle provided with gauge.
17. **Slowly** pour small amounts of fluid (typically 1/4 of the bottle is used) into “fill” opening until it reaches zero on the scale. Replace the fill plug. Minor adjustments can be made by adjusting the knob to zero the gauge.
18. If a double flexible tube was included with the gauge, separate the tubes, as only one is needed. Attach the one end of a tube to the draft gauge port labeled “Low” at top of the gauge. **Note:** By doing this, the negative readings will now read positive on the gauge scale. This is to take advantage of the larger scale on the positive side.
19. Locate the draft gauge probe, which is a piece of stainless-steel tubing with a “U” bend in it. Thread a 1/4-inch barbed fitting (included in the gauge packaging) to the draft gauge probe. **Note:** There is extra hardware that is not used.
20. Cut the tubing to an appropriate length to go between the gauge and the probe hole. Attach the free end of the tube to the 1/4 in. barbed fitting.
21. Confirm that the gauge is reading “zero” with the probe in your hand, in still air. If not, adjust the gauge to read zero using the zero adjust knob.
22. Insert the open end of probe into probe hole as shown in the figure below and allow it to hang loosely.
23. Ensure the rubber tubing is not resting against the hot exhaust pipe.

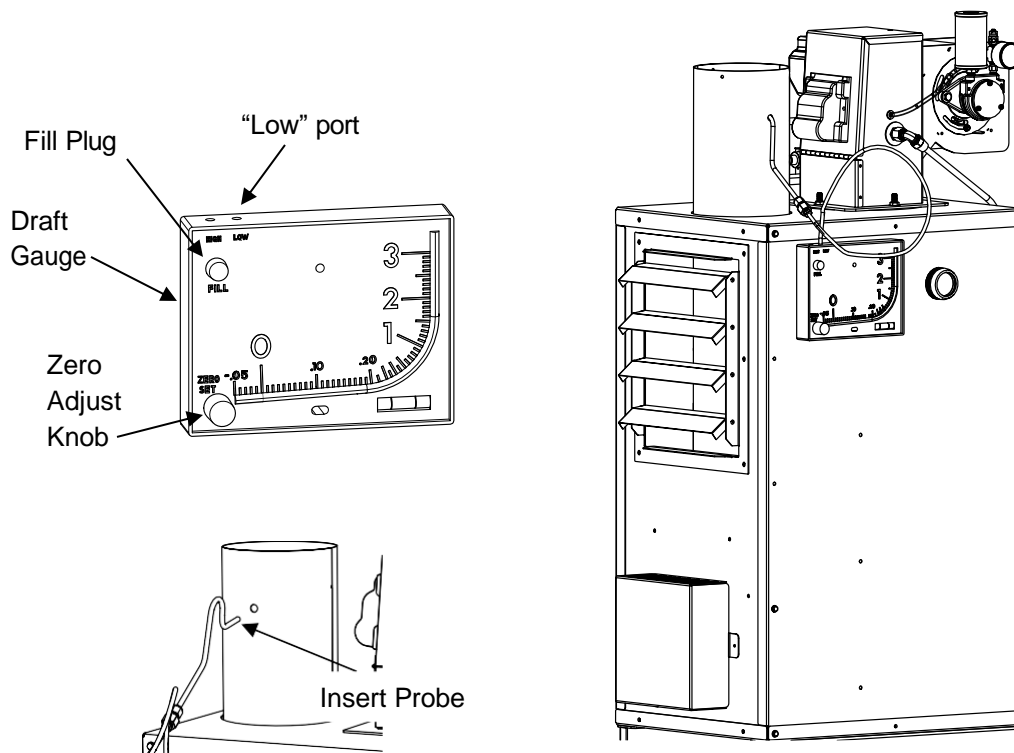

Draft Gauge and Probe Installation

## 4. Electrical System Installation

Power requirements: a dedicated, hard-wired 115VAC/60Hz circuit with a 10 Amp (15 Amp max) circuit breaker. Use copper conductors only. A wiring diagram is provided in the Appendix.


**⚠ DANGER** Electricity is very dangerous. Wiring should be completed by a qualified electrician. Consult the National Electric Code (NEC) and local codes for additional requirements. In Canada, consult the Canadian Electrical Code, Part I.

### 4.1 Wall Thermostat (Standard)

**NOTE:** The “Standard” thermostat provided with the heater is battery powered to keep wiring relatively simple.

Please follow these guidelines for thermostat installation:

- Locate the thermostat five feet (1.5 m) above the floor on an interior wall, not in the path of warm or cold air. Do not mount the thermostat on a cold exterior wall. Do not install the thermostat on the heater.
- Follow the mounting instructions that were provided with the thermostat to mount the base.
- Remove the jumper between the (R) and (Rc) Terminals (if installed).
- Connect the black thermostat wire to the (R) Terminal by loosening screw in (R) Terminal, inserting wire and tightening screw.
- Connect the red thermostat wire to the (W) Terminal (Heat relay).
- Install batteries in the thermostat and connect it to the base. It snaps into place.
- Connect the white plug on the burner end of the cable to the white receptacle on the back side of the junction box on top of the heater cabinet.

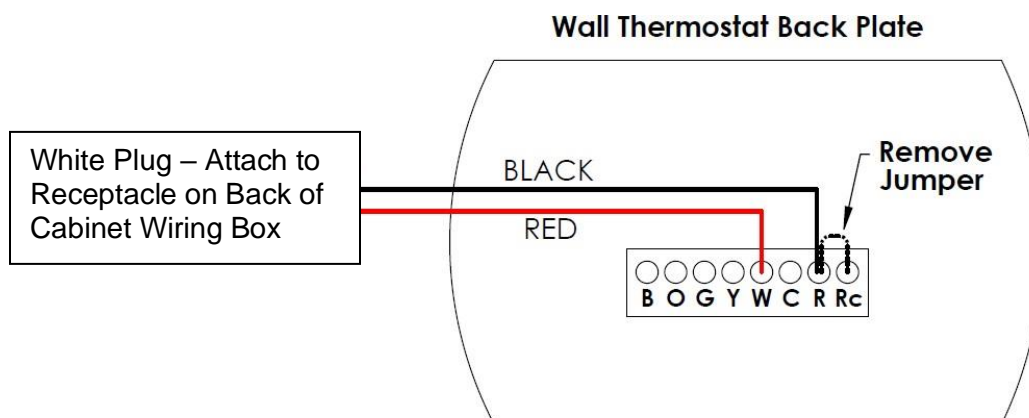


**NOTE:** CIRCUIT WILL CARRY 24V AC POWER, 0.1 AMP MAX.

## 4.2 Main Electrical Connection

**⚠ DANGER** *Personally verify that the main circuit is OFF and Locked-Out before making any wiring connections. Use only copper conductors. All wiring installations should meet National Electric Code (NEC) and local guidelines. Canadian wiring installations should be done in accordance with the Canadian Electrical Code, Part I.*

1. Have a certified electrician install a wall mounted junction box near the heater cabinet. It is recommended that the box be switchable with a lock-out feature. Provide wiring to the junction box from the building service panel (with main power off). Verify the use of a dedicated circuit, 115VAC/single phase, 10 Amp circuit breaker (15 Amp maximum per UL) - wired to code for the size and type of service used.
2. Use flexible metal conduit with white, black, and green wires, NEC size 14 AWG.
3. Remove cabinet wire box cover.
4. A standard knockout hole is provided on the back side of the wiring box for installing the power wires. Strip the ends of the wires approximately ½-inch.
5. On the cabinet wire box terminal block, connect the black wire (hot) to the terminal marked BLK, the white wire (neutral) to the terminal marked WHT and the green ground wire to the terminal marked GND. To install the wires, push down on the corresponding button (cross) on top of the terminal block and insert the stripped end of wire into the terminal hole. Gently tug on the wire to make sure that the connection is secure.
6. Reinstall cabinet wire box cover.
7. During normal usage, the power to the heater should remain on, so the oil remains hot and ready to fire. If the heater will not be used for extended periods (such as during the summer), the power should be shut off.

Refer to Wiring Diagram in Appendix for additional information.

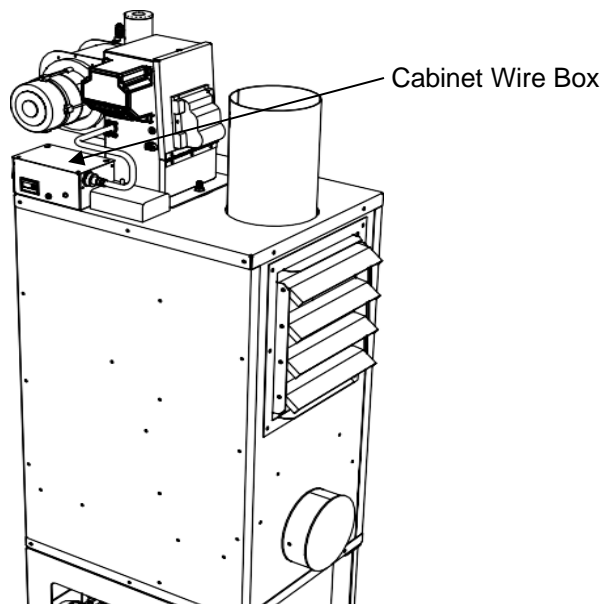

# 5. Startup and Operation

Once setup properly, EnergyLogic heaters are designed to operate reliably over a wide range of conditions with minimal adjustment. This section is provided to make sure that the heater is set up properly, and to provide instructions on the initial startup.

## 5.1 Do's and Don'ts/Tech Tips

1. Read each procedure completely before performing the steps.
2. Fill the tank with used (not new) motor oil or transmission fluid.
3. Do not put gasoline or other unapproved substances in the tank. Refer to Section 1.4 for more information.
4. Do not place fuel suspected of having debris, such as an oil dry product, into the tank.
5. Store this manual in an accessible location.
6. PERFORM THE RECOMMENDED PERIODIC MAINTENANCE.


## 5.2 Burner Primary Control Operation

The burner operation is governed by the Primary Control which is set to a 30 second trial for ignition and a 2-minute post purge (burner off delay) after a call for heat.

- The two T-Terminals are for the thermostat signal. To simulate a closed thermostat, you can jumper across the two T terminals with an alligator clip.
- The two F-Terminals are for the cad cell signal. The cad cell is a light sensor inside the burner that senses the flame. To simulate a flame, you can jumper across the two F terminals with an alligator clip.

**⚠ WARNING** Do not leave the T and F terminals jumped during normal furnace operation, as this bypasses several safety checks and may cause excessive oil to be deposited in the combustion chamber, creating a fire or explosion hazard. For the same reason, do not leave the T and F terminals jumped for more than 30 seconds if oil is being sprayed but not being burned.

- The reset button is used to reset the controller, in case of a failed start attempt or flameout.
- The LED(s) are used to indicate proper furnace operation or errors.

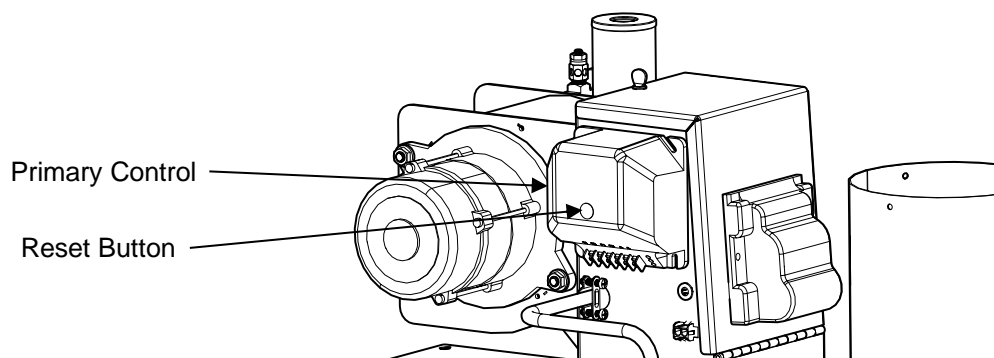

Burner Primary Control

### 5.3 Safety Systems and Warnings

Several systems built into the controls ensure that the burner operates safely and will shut down if something is wrong:

**Fuel Preheater Control:** This device prevents the oil from being overheated by the preheater in the nozzle block assembly. The preheater will heat up the fuel to the target temp (default: 140 °F) then it cuts power to the heaters until the oil starts to cool down. If starting from completely cold (power has been off), allow at least 10 minutes for the oil to heat up before turning on the thermostat and trying to light the burner.

**Cad Cell:** The flame-sensing “cad cell” detects the light emitted by the flame to determine that the flame is on. On a call for heat from the thermostat, if the burner does not light within 30 seconds, or if the flame goes out for any reason, the controller will shut down the burner. This prevents the accumulation of unburned fuel in the combustion chamber, potentially generating smoke, rumbling and/or misfiring once the burner lights.

**Primary Control – Recycle Mode:** Once a flame has been established, if the burner loses flame for any reason, the Primary Control will shut off the burner and enter Recycle Mode. After approximately 60 seconds, the Primary Control will attempt to restart the burner. If no flame is seen by the cad cell during the restart attempt, the Primary Control will lock out until it is manually reset. To reset, press and hold the red reset button on the primary control. If the cad cell sees a flame, the Primary Control will continue running the burner until the call for heat is satisfied.

**⚠ WARNING** Multiple resets may allow fuel to accumulate in the heat exchanger, therefore do not reset more than one or two times without diagnosing the issue. Contact Technical Support for assistance.

**⚠ WARNING** DO NOT ATTEMPT TO START THE BURNER WHEN EXCESS FUEL HAS ACCUMULATED IN THE CHAMBER, WHEN THE HEATER IS FULL OF VAPOR, OR WHEN THE COMBUSTION CHAMBER IS VERY HOT. Refer to section 6.4.1 (heat exchanger cleaning) for instructions on removal of excess fuel.

**Fan & Limit Switch:** The Fan & Limit Switch monitors the air temperature in the cabinet and controls the operation of the fan. For safety, if the temperature becomes too hot (hits the high limit setpoint), it will completely shut off power to the burner.



The Fan & Limit Switch has a bi-metal coil probe that rotates as it heats up. The switch has three set point tabs around a dial: Fan Off, Fan On, and High Limit. When the burner fires and heats up the chamber, the dial rotates. It goes past the Fan Off setpoint. Then when it gets to the Fan On setpoint, the fan is energized through the blue wire. As long as the temperature stays below the High Limit setpoint, the burner will be powered through




the red wire. When the burner shuts off, the chamber needs to cool down all the way to the Fan Off setpoint before the fan shuts off. NOTE: The fan may cycle on and off on its own due to the residual heat in the chamber or if the ambient air is very cold.


The Fan & Limit Switch recommended setpoints are as follows:

- Fan Off at 90°F/32°C
- Fan On at 130°F/54°C
- High Limit at 230°F/110°C

Fan & Limit switches from multiple manufacturers may be used in the 75H heaters. They may look a little different, but they operate similarly.

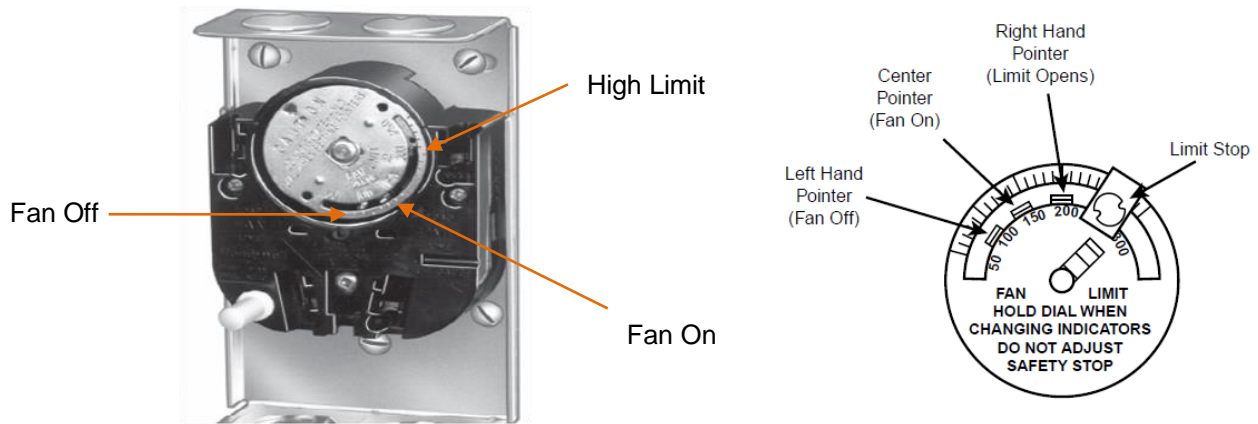

The Fan & Limit Switch also has a manual mode which can be used to turn the fan at any time. To turn the fan on manually, either push in the white knob, or flip the switch to the side, depending on the switch model that you have.

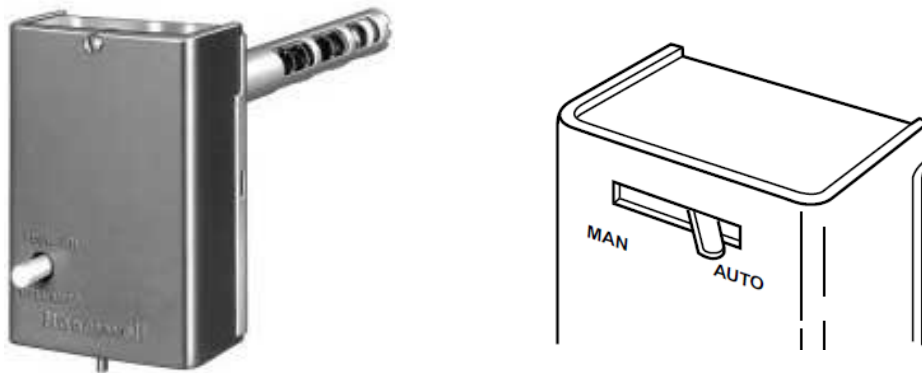

If the Fan & Limit does not operate as described above, call Technical Support for assistance.

## 5.4 Heater Startup

Prior to the initial startup of the heater, make sure the power has been on at least 10 minutes for the nozzle block to heat up. Once the burner is operating, the system should be checked and necessary adjustments made. It takes some time for fuel to reach the nozzle and push all the air out of the system.

**⚠ WARNING** DO NOT START THE BURNER UNLESS ALL CLEANOUT COVERS AND THE FLUE PIPE ARE SECURELY IN PLACE.

### 5.4.1 Priming and Starting the Heater

This section explains how to prime the metering pump and start the heater.

1. Make sure the used oil storage tank has adequate oil, with oil level above the low fuel cut off float switch. Do NOT fill with new motor oil as it will not burn properly!
2. If power to the heater is off, switch it on. Wait 10 minutes for the oil preheater to heat up.
3. Verify that the primary control is not displaying any errors or lockouts. You may need to reset the controller by pressing the reset button.
4. Bridge the T1 and T2 terminals of the primary control with an alligator clip or short wire.
5. Once the burner motor starts running, bridge the F1 and F2 terminals of the primary control.
6. Monitor the view port on the side of the heater to confirm the presence of ignition spark and observe the status of the flame. If no spark is visible in the view port, remove the F1-F2 bridge and allow the primary control to automatically reset and reattempt light off, then replace F1-F2 bridge and confirm that continuous spark has now been established. If continuous spark cannot be established, stop priming by removing both bridges and turning off the thermostat; troubleshoot the issue to restore ignition spark, then return to Step 3.
7. If no fuel sprays from the burner nozzle after 10 minutes of priming, call for technical support to troubleshoot the issue to restore fuel delivery to the system.
8. When priming is achieved, the flame should light right away. Do not continue to spray fuel into the chamber if it is not burning!
9. Remove the T1-T2 and F1-F2 bridges to return the unit to normal operation. Continue to the next section for important checks and adjustments.
10. If the heater will not light, call for technical support.

## 5.4.2 Burner System Checkout


Once the heater starts operating, make the following checks and adjustments:

**⚠ WARNING** *If you are unable to obtain the proper adjustments, do not run the heater. If you cannot resolve the issue, call Technical Support for assistance.*

**Fan Operation:** Within the first few minutes after the burner fires, make sure that the fan begins to operate and directs warm air into the room. If not, this may indicate a problem with the unit. Shut down the heater and diagnose the issue or call for assistance.

**Exhaust System:** Check that the flue exhaust is flowing properly, and there are no exhaust leaks inside the building. Check the outside flue pipe to ensure that no black smoke is present. If smoke is present and the draft is correct (see adjustment procedure below), call for assistance.

**Draft Adjustment:** After operating the heater for about 15 minutes, verify the draft gauge is reading 0.04 inches of water column ("WC).

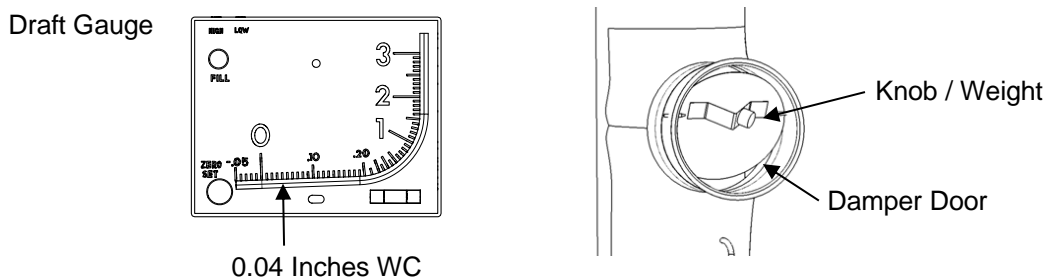

Draft reading and adjustment

- If the draft gauge reading is less than 0.04 inches of WC: Loosen the adjustment weight on the barometric damper door, then slide it to the right, or closer to the damper door pivot axis, and retighten it.
- If the draft gauge reading is more than 0.04 in. WC: Slide the weight to the left, or away from the damper door pivot axis, and retighten it.
- Verify that the reading remains at 0.04 inches of WC with exhaust fans and vented appliances on in your building and all doors and windows closed.

**⚠ WARNING** *A negative pressure inside the building may impede intake of combustion air to the burner, which may result in a hazard from smoke inhalation and/or fire. Use of exhaust fans in your shop without adequate make-up air may create a negative pressure. There are other possible causes as well. Corrective measures must be taken if the correct draft setting cannot be achieved.*

**⚠ WARNING** *If you are unable to adjust the damper door to obtain at least 0.04 inches WC, there is not enough draft for proper exhaust. Do not run the heater under this condition. If you cannot resolve the issue, call for assistance.*

Note: The draft gauge should read 0.0 inches of WC when the probe is removed from the stack. (If not, make sure the gauge is level, and readjust the zero knob). If the heater is not running, the draft gauge with the probe installed into the stack will not necessarily read zero, depending on ambient conditions.


**⚠ CAUTION** *The probe may be hot!*

**Fuel Pressure Gauge:** The fuel pressure gauge on the pump outlet should read approximately 0-5 psi when the pump is operating.

- If the fuel pressure reading is high, it is an indication that there is a clog in the fuel line somewhere. Look for crimped tubing, a clogged nozzle or solenoid valve, obstructions in the nozzle block, or possibly the solenoid valve is not opening properly. Clean or repair as necessary.

**Vacuum Gauge:** The vacuum gauge on the inlet of the pump should read between 0 and 5 inches of mercury (Hg). If the vacuum reading is above 5 in. Hg, the filter screen inside the tank will need to be removed and cleaned. If the reason for high vacuum cannot be determined, call for Technical Support.

**Burn Quality – Visual Check:** When the burner is operating properly, the flame is bright yellow. If the flame is other than bright yellow, this indicates improper combustion. Contact Technical Support for help. **⚠ CAUTION** *The view port is hot. When cool, the viewport may be removed for cleaning. Do not operate the heater without the viewport in place.*

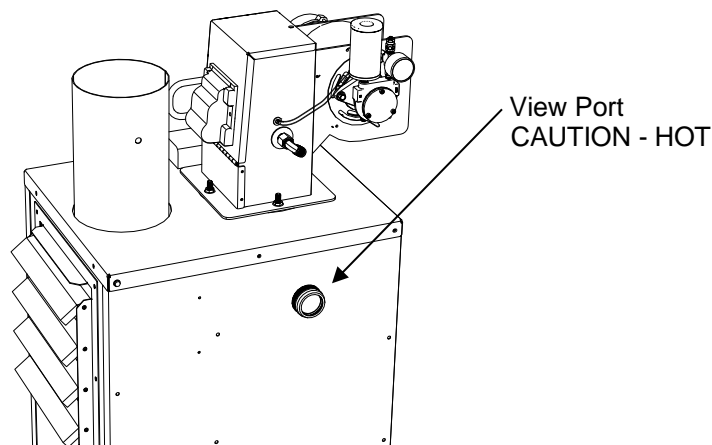

Visual Flame Inspection


**Air Pressure:** The burner has a built-in air compressor to provide pressurized air for oil atomization at the nozzle. The air pressure is set at the factory to 3-4 psi. If the pressure has drifted and a pressure adjustment is required, loosen the 3/8" nut on the bleeder valve, adjust the stem with a small screwdriver, and tighten the nut to lock it in place. If 3 psi can not be achieved, see Sect. 6.4.4 – Air Compressor Maintenance.

**Burn Quality – CO<sub>2</sub> Exhaust Measurement:** Only a qualified service technician with an exhaust combustion analyzer should adjust the burner air shutter. Measurements are taken through the draft gauge probe port. Exhaust gas carbon dioxide readings should be approximately 11% ±1% for a clean heater.

The factory setting of the air shutter (75% open) is optimized for average operation, so it should not normally require adjustment. However, if operating at high-altitude (above 6000 feet), it can be opened fully. To adjust the shutter, loosen the locking screws, then rotate the shutter and retighten the locking screws.

**Burn Quality – Smoke Measurement:** A qualified service technician may measure smoke content, following procedures of his smoke pump.

- Acceptable results per smoke pump comparison chart = zero or #1 smoke spot.
- A yellow- brown smoke spot color is normal when burning used oil due to the presence of non-combustibles.
- The presence of black or dark grey soot indicates incomplete combustion.

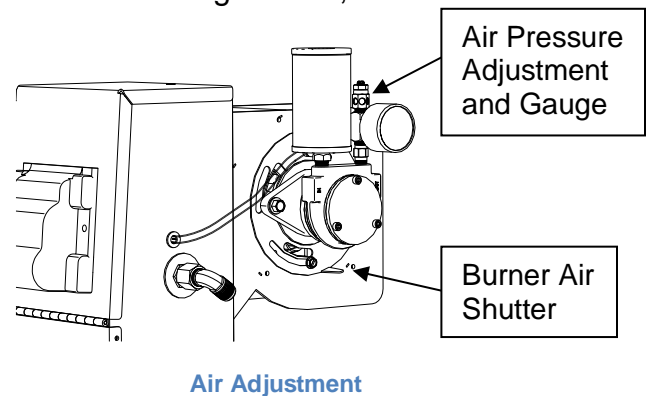

**Flame Monitoring Cad Cell:** The primary control can be used to check the cad cell:

- The resistance of the flame sensor reduces as it sees brighter light. The flame sensor should read <1500 Ohms of resistance with the flame burning properly.
- If the flame looks bright, but the sensor is not responding properly, contact Technical Support for assistance.
- To test the flame sensor, disconnect one of the yellow wires at the primary control, start the burner and then jumper the F1-F2 terminals to keep the burner going. The resistance can then be measured directly between the two yellow flame sensor wires with a multi-meter on the ohms setting.

## 5.5 Everyday Operation of Your Used Oil Heater

Once installed and inspected, operate your heater as follows:

### Daily Operation.

- Set the room thermostat to the desired temperature. The heater should cycle on and off automatically based on the temperature.
- When the fuel level starts to get low, a float switch in the tank will cut the thermostat circuit and the “Low Fuel” light will illuminate. Add sufficient fuel to tank and operation should resume on its own.
- Do not shut power off to the heater unless it will not be used for an extended period of time (over 2 weeks). This will keep the oil hot and ready to fire.

### Manage the Used Oil.

- Do not put unapproved substances into your used oil storage tank. See section 1.4 for a list of approved fuels.
- Monitor the bottom of your tank for water and drain it off on a regular basis.
- To extend the cleaning interval of the in-tank filters, pre-screening the oil prior to putting it into the tank is recommended.

### Monitor the System.

- After your initial set up, monitor the system gauge readings on a regular schedule to assure that the system is stable. Record the readings and any maintenance performed in a maintenance log (see Sect. 8.3) to track your system performance over time. An hour meter is provided on the wiring box to keep track of run hours.
- Maintain your heater. Regular maintenance will help to keep the heater running reliably and efficient for many years.
- To shut down the heater in an emergency, turn off the power at the professionally installed, switched junction box or main breaker.
- Do shut power off to the heater if it will not be used for 2 weeks or longer. This will prevent oil from cooking in the nozzle block.

## 6. Maintenance

---

Regular maintenance is required to keep your heater operating reliably and efficiently. For best results, purchase an annual maintenance kit (PN 05000208), which includes a nozzle, all gaskets and o-rings, as well as an air compressor filter. A burner maintenance brush kit (PN 05000071) is the best tool to use for cleaning the burner. A cleaning tool (PN 04000459), a vacuum and/or 6-inch flue brush can be used to remove ash from the heat exchanger.

### 6.1 Service Contracts

If you are not qualified or do not wish to perform the heater maintenance yourself, contact Technical Support for the location of our nearest dealer or service provider. Putting a service contract in place is the best way to make sure that the required maintenance is completed regularly, and your system will operate reliably when needed, saving you both time and money.

### 6.2 Safety Warnings – Lockout/Tagout

There are many potential hazards associated with working on this equipment, including electricity, heat, heights, dust and chemicals.

**▲ DANGER** *Make sure the main electrical circuit is off and locked out / tagged out prior to performing maintenance.*


**▲ CAUTION** *Wear proper safety equipment for the tasks, including a HEPA quality dust mask to avoid inhalation of ash dust when cleaning the heat exchanger or flue. Use suitable access aids/equipment when working on the heater. Do not climb on the heater. General safety rules and precautions should be followed at all times to prevent any accidents that could lead to personal injury or property damage. Only those qualified should perform these tasks.*

### 6.3 Monitoring System Performance over Time

EnergyLogic recommends that you monitor and record your system gauge readings regularly over time, in order to diagnose issues that may arise. For example, if the pump vacuum gauge initially reads 2 inches Hg, but over time has risen to 10 inches Hg, it is an indication that the fuel filter is most likely clogged up. Record the system gauge readings on your maintenance schedule and log provided in Section 8.3 of the Appendix. Have this log handy if you call for technical support.


## 6.4 Maintenance Procedures

The following sections provide detail on how to perform the recommended maintenance. If you have questions or need assistance, contact Technical Support.

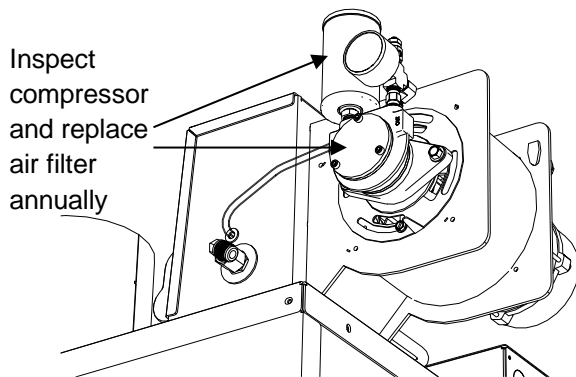


Inspect compressor and replace air filter annually

Remove ash every 1000 hours or at the end of every heating season.

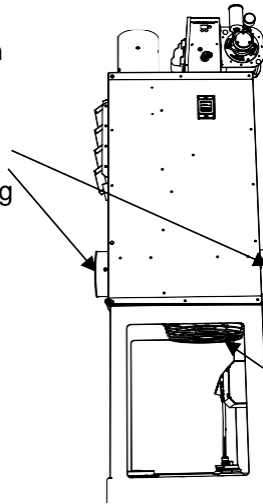


Clean fan annually.


Inspect preheater annually. Clean grooves and replace gasket when needed.

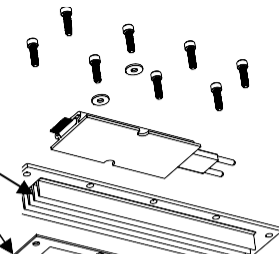


Clean / inspect solenoid valve and replace O-rings annually.

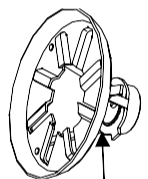

Inspect electrode and retention head settings annually (Sect. 6.4.5)

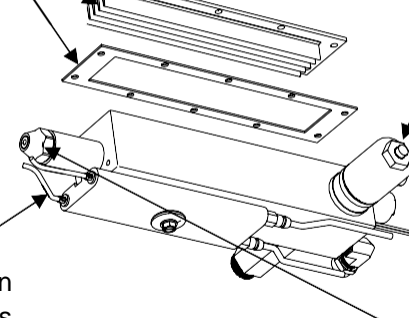

Clean / inspect nozzle and flame retention head annually and replace nozzle or O-ring when needed.

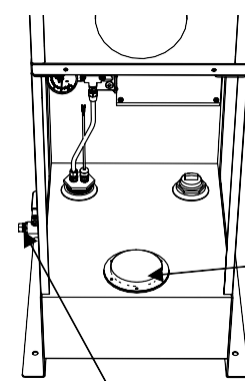

Clean fuel-fill filter basket annually or as needed.

Drain water from tank as needed. Clean tank as needed. Inspect monthly.

**⚠ CAUTION** Always wear personal protective equipment when performing inspection and service. The maintenance schedule is the minimum recommended, but if you see smoke or have trip outs then the unit must be shut down and serviced immediately before running it again. Increase the maintenance as your situation requires.



## 6.4.1 Heat Exchanger Cleaning


### How often?

Clean ash from heat exchanger at the end of every heating season or every 1000 hours of operation (whichever occurs first) *or if there are signs of incomplete combustion or smoke, or if unburned fuel has accumulated in the heat exchanger.*

### Tools Required:

5/16" nut driver, 1/2" socket/ratchet, 1/2" and 3/4" open-ended wrenches, chimney brush, work gloves, dust mask and safety glasses, large heavy-duty plastic trash bag and duct tape. For your convenience, EnergyLogic offers flue brush accessories.

**▲ DANGER** *Personally verify that the main power is turned off and locked out at the circuit breaker.*

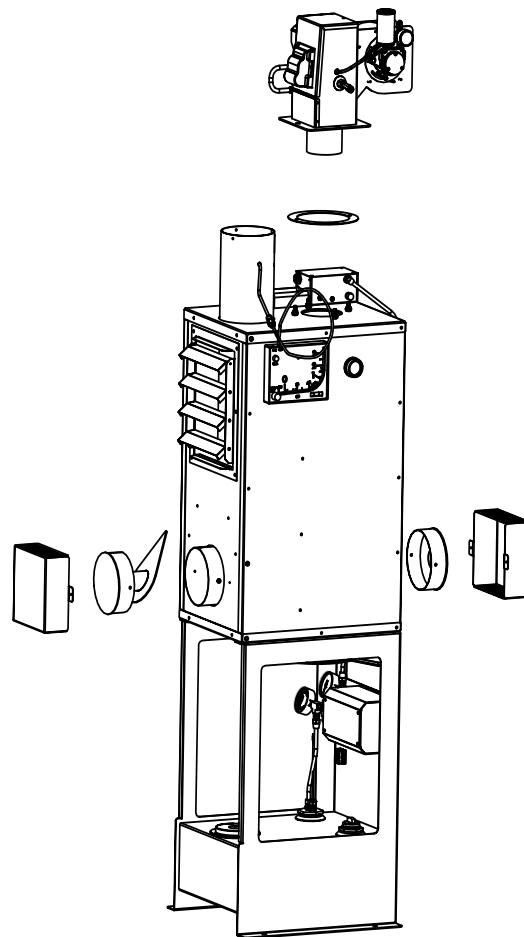

Heat Exchanger Cleaning

## Procedure for Heat Exchanger Cleaning:

1. **⚠ CAUTION** If heater is hot, allow it to cool before cleaning. Wear all safety equipment.
2. Unplug the black burner cord at the cabinet wiring box and the red plug on the grey cable from the side of the burner.
3. Disconnect the fuel tubing by loosening the flare fitting attached to the elbow on the side of the burner. Hold the elbow with the ½" wrench and turn the flare fitting with the ¾" wrench. Have a rag ready, as some oil will drip. Cap the elbow to prevent additional oil leaking out.
4. Remove the four ½" nuts holding the burner to the cabinet, and lift the burner out of the cabinet. Set it aside.
5. Scrape the combustion chamber sides and gently tap the flue pipe. Allow ash to fall to the bottom of the heat exchanger.
6. Remove the safety covers over each clean out port by removing the two screws.
7. Remove the two screws securing each port cap (located on opposing sides, near the bottom of the heater cabinet) and remove both caps. Be prepared to catch/contain any ash that may spill out as the caps are removed.
8. Tape a trash bag to one opening with duct tape, so that ash can fall into the bag, and use a cleaning tool or brush to push ash into the bag from the opposite opening. A shop vacuum with a HEPA filter may also be used to remove ash.
9. Remove the trash bag and properly dispose of the ash.
10. Remove the viewport cover and glass by unscrewing the cover from the viewport tube.
11. Clean with glass cleaner. If glass cleaner is not effective, carefully scrape the glass with a razor blade.
12. Reinstall the viewport glass (with gaskets) and cover. Do not overtighten.
13. Inspect the cleaned heat exchanger and flue. If damaged, call for Technical Support.
14. Inspect the cap-insulation gaskets. If damaged, replace the gaskets (PN 06001183).
15. Reinstall the port caps, ensuring that the baffle is on the same side of the heater as the air louver. Use existing screw holes and replace screws if they are damaged.
16. Reattach the safety covers.
17. Reinstall the burner, making sure the grey cord with the red plug is out of the way. Replace the burner gasket if damaged (PN 20910103). Install the nuts holding the burner to the cabinet.
18. Connect the flare fitting on the fuel tubing to the elbow on the side of the burner.
19. Plug in the black burner cord at the cabinet wiring box, making sure to align the key and slot, and the red plug on the side of the burner.
20. Turn on power to the heater and wait 10 minutes before trying to fire it back up to allow the oil to heat up.
21. Restart the heater per the procedure in Section 5.4.2.

**⚠ WARNING** Make sure to perform startup (5.4.2) and system checks (5.4.3) after every maintenance cycle. Record maintenance performed in the log.

## 6.4.2 Fan Cleaning

### How often?

Annually.


### Tools Required:

5/16" nut driver, pipe brush, shop vacuum, work gloves, dust mask and safety glasses.

**⚠ DANGER** *Personally verify that the main power is turned off and locked out at the circuit breaker.*

### Procedure:

1. Wear all safety equipment. NOTE: This job is easier with two people.
2. Remove screws from wire guard on the bottom of the heater cabinet.
3. Tilt the fan down for access to the blades.
4. Gently clean dust from the fan blades. Be careful not to damage the blades or the power cord.
5. When finished, reattach the fan.

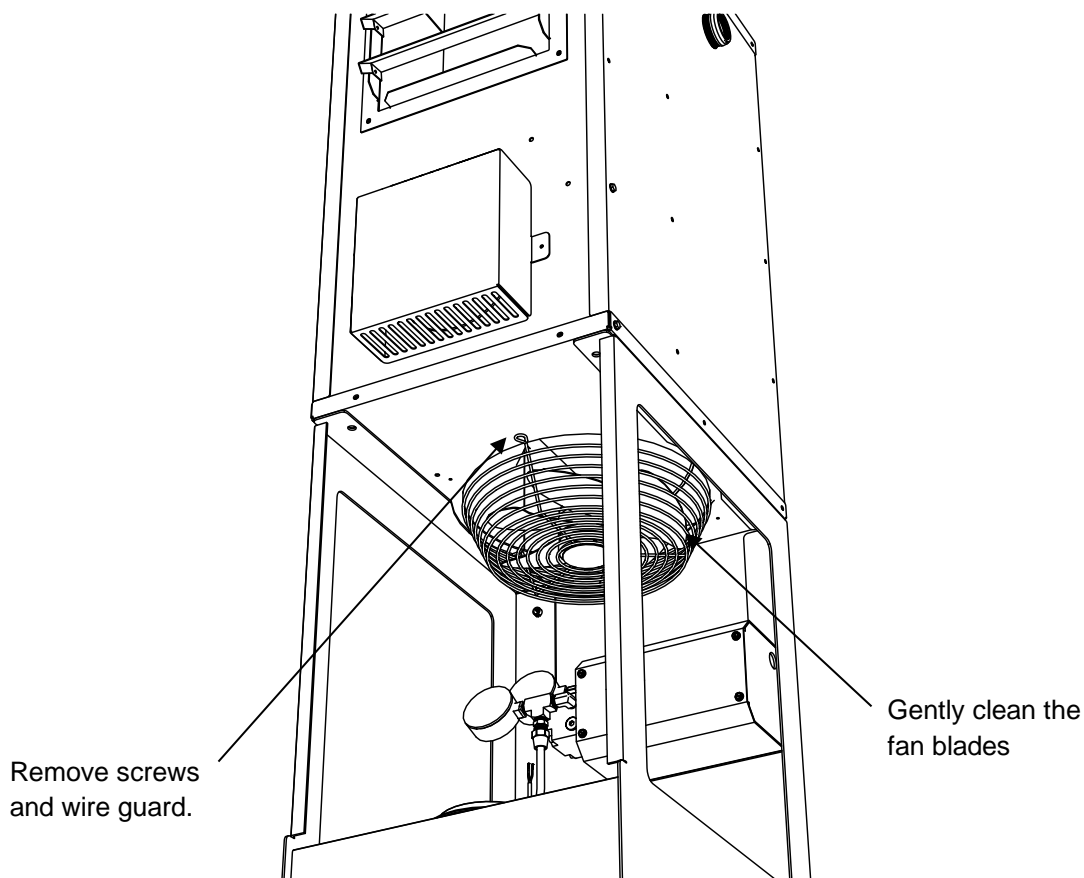

Blower Cleaning

## 6.4.3 Nozzle Line Assembly Cleaning

### How often?

Annually, or if the nozzle becomes blocked with debris (indicated by a higher operating fuel pressure at the pump-pressure gauge).

### Tools Required:


1/2" and 3/4" open end wrenches, 1/2" and 5/8" sockets/ratchet, 1/4 in. nut driver, hex wrench set, vise, flat-blade screwdriver, small wire brush or pipe cleaner (from optional maintenance accessory brush kit), parts washer fluid, rags, safety glasses, rubber gloves.

### Replacement Parts:


Annual maintenance kit (PN 05000208).

### Procedure:


1. Remove the burner, following steps 1 through 4 in Section 6.4.1.
2. Remove the elbow and straight fitting together from the side of the burner.

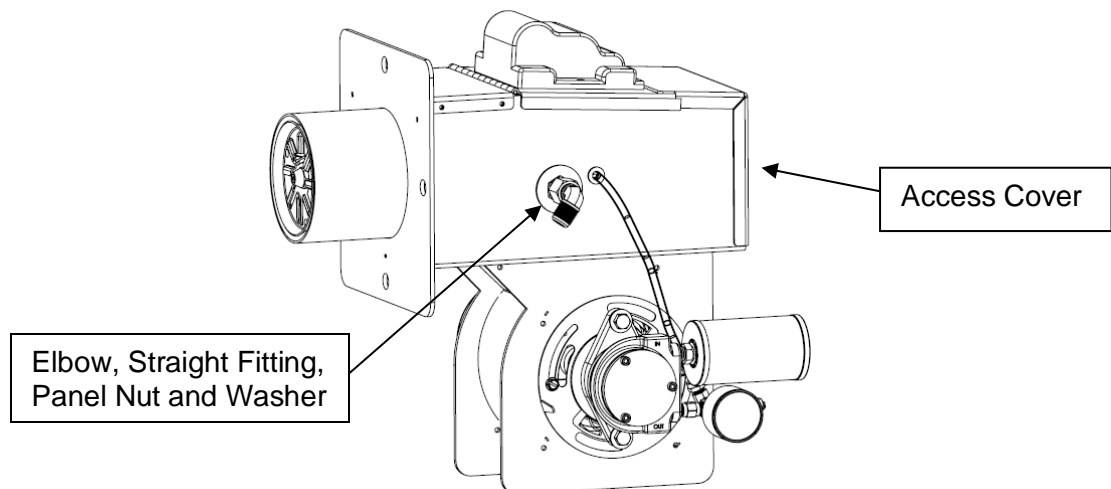


3. Remove the thumb screw and access cover. Then open the hinged transformer door. TIP: Take a picture of the assembly and wiring before disassembling to use as a reference later.
4. Remove the plastic air tube from the quick connect fitting in the nozzle block by pushing the metal ring on the end of the fitting in, while pulling the tube out.
5. Disconnect the white plug from the receptacle.
6. Disconnect the red preheater wires, the black temperature switch wires, and the black solenoid valve wires from the terminal block. To remove a wire, push the corresponding button of top of the terminal block down with your finger or a screwdriver while gently tugging on the wire.
7. Then remove the panel nut and washer from the outside of the burner. If the aluminum bulkhead fitting spins with the nut, you will have to hold it with a second wrench inside the burner.
8. Tilt the nozzle line assembly and pull it to the side to free the bulkhead fitting. Then slide and lift the nozzle line assembly out of the burner through the open cover.
9. Disassemble and clean the nozzle line assembly thoroughly. TIP: Take some pictures of the assembly first to use as a reference later. NOTE: Take care not to submerge the electronic components in oil or cleaning fluid.

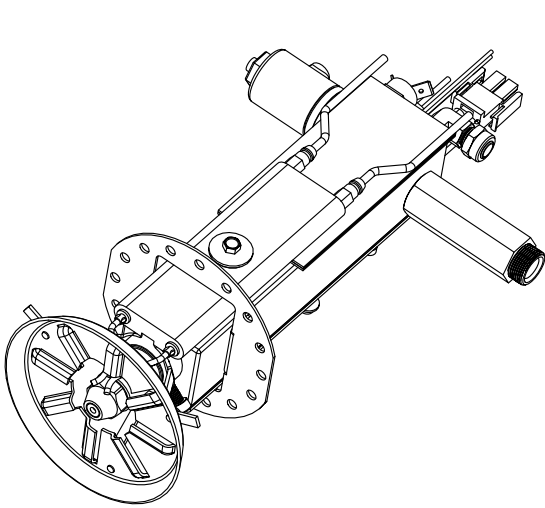

Nozzle Line Assembly – Top View

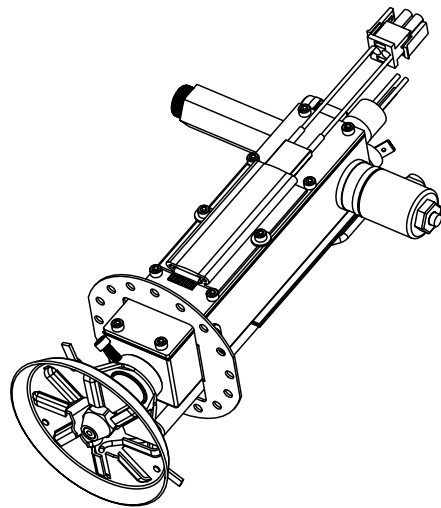


Nozzle Line Assembly – Bottom View

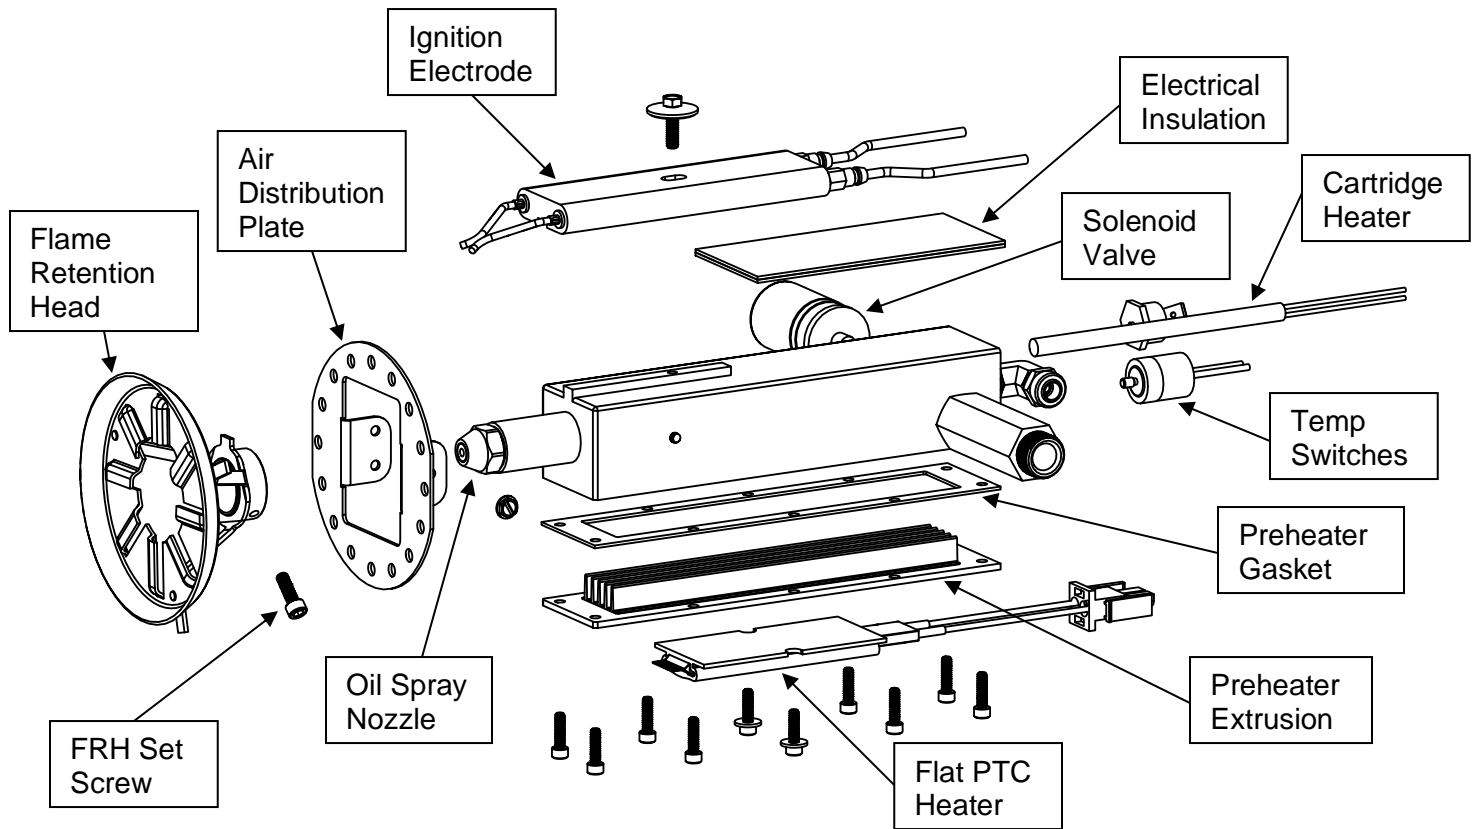

Nozzle Line Assembly – Exploded View


10. Reassemble in reverse order. See proper spacings on the following page. Make parts snug, but do not overtighten. Replace any gaskets or o-rings that are damaged.

NOTE - The rubber/fiberglass insulation piece is required to prevent arcing between the electrode and nozzle block. It is held in place by the electrode ceramic.

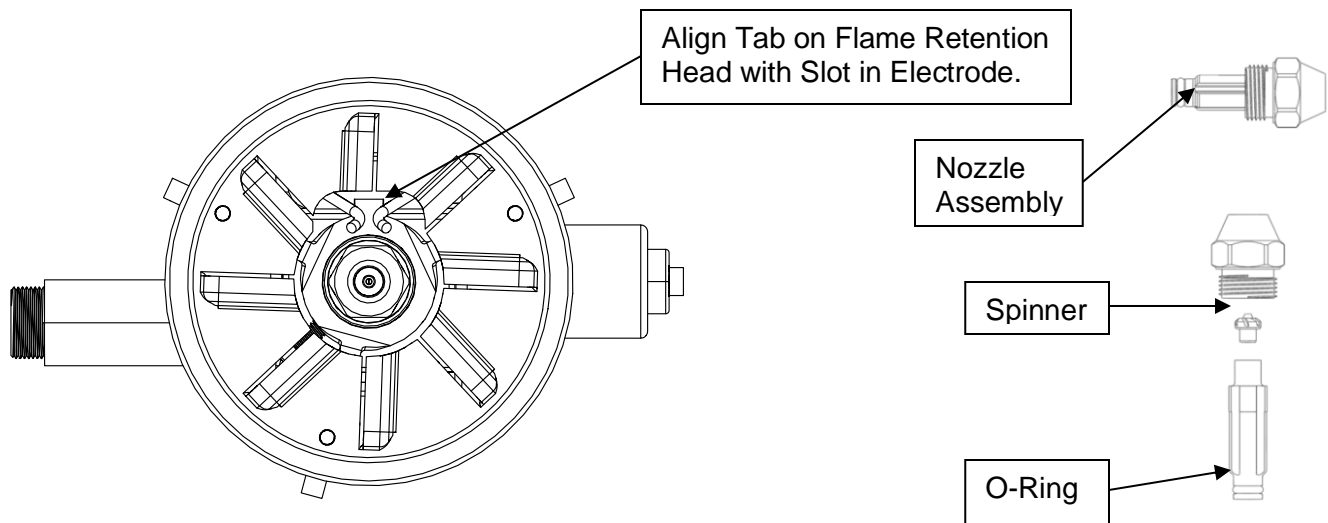

Flame Retention Head recessed inside Air Tube  
1/16" (1.5 mm).

Nozzle should extend approx. 1/8"  
(3 mm) beyond Air Vanes.

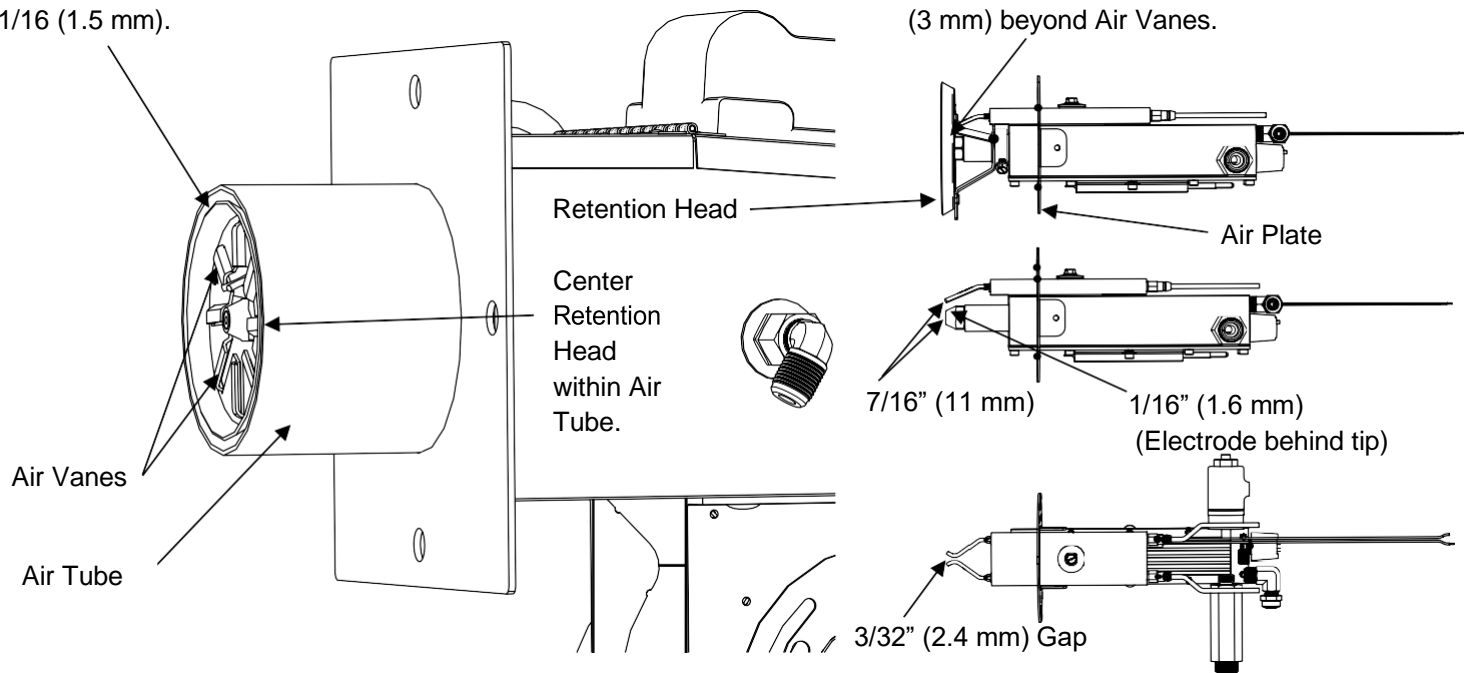

#### Settings for Retention Head & Electrodes

Inspect the locations of all the components. Use the following specifications:

- The Electrode Gap: 3/32" (2.4 mm). If adjustments are necessary, use needle-nose pliers to carefully bend the electrode wires. Replace the electrode if the wires are worn significantly or if the ceramic is cracked.
- Electrode Tips should be 1/16" (1.6 mm) behind the end of the Nozzle.
- Nozzle protrudes approximately 1/8" (3 mm) beyond Retention Head vanes.
- Vertical location of electrode wires: 7/16" (1.6 mm) from center of nozzle to tips of wires.

The wires should be approximately centered between the nozzle and retention head opening.

- The leading edge of the Flame Retention Head is recessed approximately 1/16" (1.5 mm) into the Air Tube.
- Retention Head is centered within the Air Tube. If not centered, straighten the centering Tabs of the Retention Head if they are bent. Loosen the panel nut, center the Retention Head and retighten the panel nut if necessary.
- Make sure the Air Distribution Plate is properly installed, as shown above.

**⚠ WARNING** Perform startup (5.4.2) and system checks (5.4.3) after every maintenance cycle. Record the checks, maintenance performed, and gauge readings in the maintenance log.

## 6.4.4 Air Compressor Maintenance

### How often?

Check pressure regularly. Adjust, clean and replace vanes as necessary.



NOTE: If the pressure gauge has a vent plug, it should always be open to prevent readout errors.

### Tools Required:

9/64-inch Allen wrench, 3/8- and 7/16-inch wrenches, small flat-blade screwdriver, GAST compressor cleaning fluid, shop towel, rubber gloves, safety glasses.

### Procedure:

1. Wear all safety equipment.
2. Replace the compressor air filter annually or as needed (PN 20210112).
3. Remove the pressure adjustment fitting (air bleed valve) and carefully blow the dust out of it. Reinstall the fitting.
4. Start the burner by moving the wall thermostat above room temperature and note the air compressor output on the gauge. If the gauge reading is in the 3-4 PSI range, the air compressor is operating as designed and no further maintenance is required.
5. If the gauge reading is off, try to correct it by adjusting the air bleed valve. If you are unable to achieve 3 psi, check/do the following:

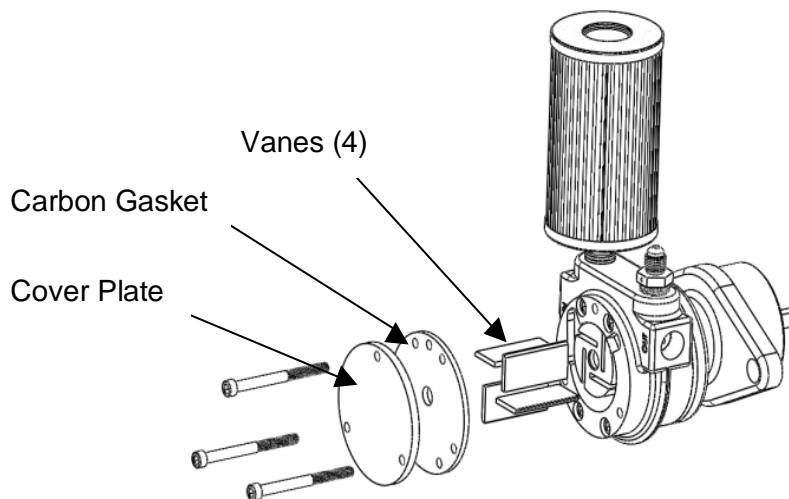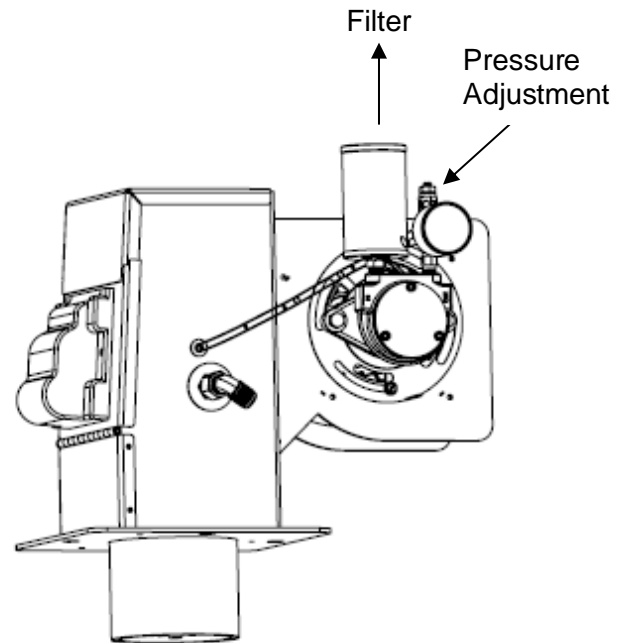




1. With the burner power shut off, remove the air filter by sliding it off.
2. Remove the air tubing from the quick connect fitting, by pushing in the metal ring while pulling the tubing out.
3. Remove the two hex bolts with a 7/16" wrench and slide the air compressor assembly out of the burner body.
4. Use a 9/64" Allen wrench to carefully remove the air compressor cover plate and carbon gasket.
5. Inspect the carbon gasket for wear—reverse if worn or replace as necessary.
6. Spin the compressor shaft by hand and observe the vanes.
7. If the vanes do not move in their slots as the rotor turns, clean the vanes. Clean the vanes and compressor body using Gast compressor cleaning fluid or suitable equivalent.

**Note:** Do not use oils or petroleum solvents, such as engine degreasers. These fluids leave unwanted residues behind that may cause the vanes to stick and/or bind. If the vanes are worn out, you may purchase a vane replacement kit (PN 75000166).

8. Reassemble the air compressor. Be careful not to over-tighten the cover plate.
9. While the air compressor is out of the burner, remove the interior coupling that transmits rotation from the motor gear grip to the air compressor gear grip.
10. Inspect the coupling hubs and elastic sleeve for wear or damage. Replace if needed. (the motor may also need to be detached from the burner to for inspection/service)
11. Reinstall the coupling, compressor assembly, air tube, and air filter. Ensure the coupling sleeve ends align properly with the coupling hubs. If any part of the coupling needs to be replaced go to step 12. Otherwise go to step 13.
12. On the motor side, the blower wheel should be set so that 7/8" of the shaft is exposed when the coupling hub is removed. Fully seat the coupling hub with the larger interior dimension against the blower hub and ensure that the set screw is tightened securely to the flat portion of the shaft. Slide the coupling's elastic sleeve onto the motor-side hub, then secure the motor to the burner housing. Secure the coupling hub with the smaller interior dimension as far onto the compressor shaft as possible such that the set screw is still on the flat portion of the shaft. Secure the set screw to the flat of the compressor shaft. Slowly slide the compressor and coupling hub into the coupling sleeve and secure the air compressor to the burner housing. Make sure the tabs on the spacer plate under the air compressor align with the bolt holes before tightening and verify the compressor is fully seated once complete.
13. Run the burner and confirm/adjust the air pressure to 3 - 4 psi.

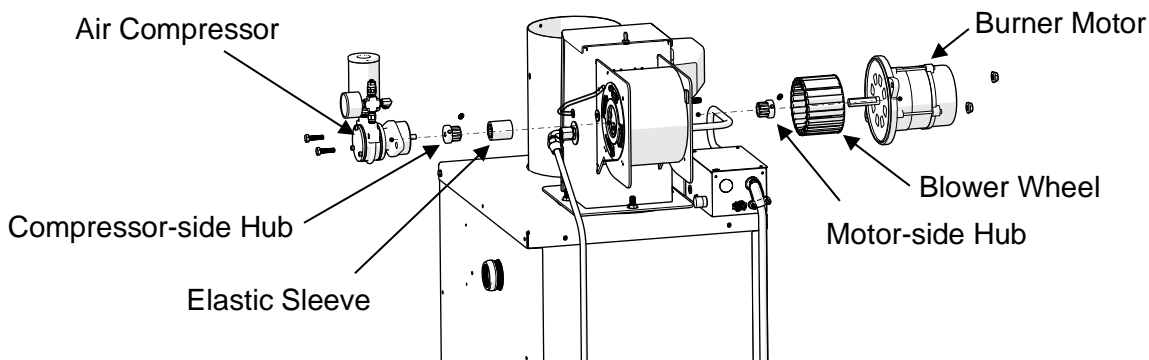

Coupling from Motor to Compressor

## 6.4.5 Oil Filter Cleaning

### How often?

As needed. The in-tank oil strainer is protected by the strainer basket in the fill port, so it should rarely need to be cleaned. Clogging is indicated when the pump vacuum increases to over 5 inches Hg.


### Tools Required:

5/8" and 3/4" open end wrenches, pipe wrench, parts washer fluid, rags, safety glasses, rubber gloves.

**▲ DANGER** Personally verify that the power is off and locked out at the circuit breaker.

### Procedure:

1. To remove the Fill Port Strainer, simply remove the screws holding it in the tank and pull it up.
2. Clean and reinstall. NOTE: One gasket goes above, and one goes below, the strainer basket flange.
3. To remove the Top Suction Assembly, first disconnect the three float switch wires. Note colors.
4. Use the 5/8" and 3/4" wrenches to disconnect the flare fittings at the pump.
5. Remove the two screws holding the plate to the top of the tank.
6. Carefully lift the assembly out of the tank, taking care not to damage the float switch. Note the suction tubing will be full of oil.
7. Clean the strainer and float switch. Then reinstall the assembly.
8. Re-prime the system as shown in Sect. 5.4.

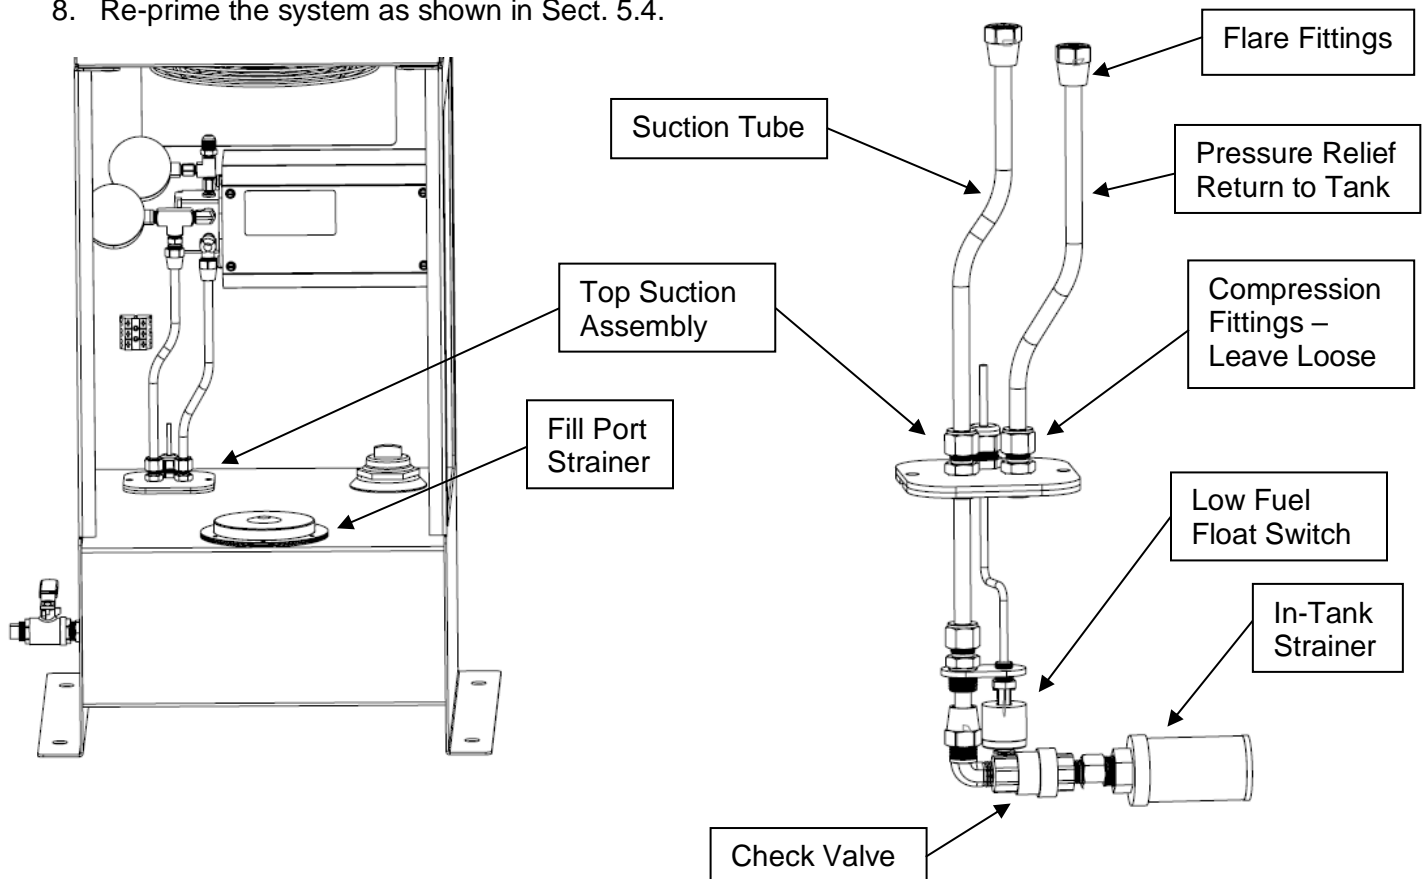

# 7. Troubleshooting

---

Your heater is designed and built for years of reliable service with regular maintenance. Should you experience trouble, refer to this section for troubleshooting guidance.

**⚠ CAUTION** *Do not tamper with the unit or controls if you are not qualified – call your service technician or Technical Support for assistance.*

**⚠ DANGER** Testing may include working with high voltage electricity, which if mishandled may cause serious injury or death.

## **Start Here – First Steps of Trouble Shooting.**

It has been our experience that many problems can be traced to improper installation, improper maintenance, poor fuel quality, or unintended results from changes made to the system or surrounding structures. So, the first steps in troubleshooting shall always begin with the following:

Verify installation and environmental factors. Refer to Chapters 2 through 4, as well as Section 8.3 regarding the flue. Remember that even if the original installation was properly performed, there can be unintended results from changes made to the building or structure.

- a. Is there adequate combustion and make up air? Have exhaust fans or other devices been added to the building that may create a negative pressure within the building? Has another fuel burning appliance been added to the building or room? Consider make up air requirements for all appliances.
- b. Exhaust Flue System: Check draft setting. Have changes taken place on the roof that might affect the flue stack? Any obstructions (birds nest, etc.) in the flue.
- c. Is the electrical circuit still sufficient, or has it been compromised by the addition of other appliances to the circuit? Is the power clean?

Verify maintenance. If maintenance has not been performed timely and properly – STOP – perform ALL maintenance (Chapter 6) before troubleshooting. Smoke, soot, trouble in lighting-off or tripping out can all be caused by lack of proper maintenance.

Verify equipment. Common things to check are:

- a. Is the fuel in the tank low? Has the fuel level fallen below the float switch?
- b. Are the float switch and thermostat working properly? Verify continuity between the two pins in the red plug going into the side of the burner.
- c. Is the pickup strainer dirty or clogged? Indicated by a high vacuum reading on the pump inlet gage.
- d. Has fuel condition changed (bad fuel, water in fuel)? Check for water emulsified in oil at the drain. If bad fuel is suspected, drain the tank and fill with different used oil or #2 heating oil.
- e. Has the nozzle or solenoid valve become clogged. Indicated by a high pressure reading on the pump outlet gauge.
- f. Is the air compressor making the correct pressure? Check the air pressure

gauge on the burner.

- g. Is there a good spark? The spark should be at least ½-inch long and shoot out over the end of the spray nozzle. Check for spark through the viewport window during an ignition attempt. Remove the window and clean if necessary.
- h. Are the oil preheaters working properly? With the thermostat unplugged so the burner will not attempt to start, carefully open the burner cover and feel the nozzle block to make sure it is hot.
- i. Do unauthorized persons have access to the system? Have the controls been tampered with? Check factory settings (start up, Section 5).

See the Troubleshooting Table below for additional information. If your issue persists, contact Technical Support for further assistance.


## 7.1 Troubleshooting Table

Behavior	Possible Causes	Actions
<p>1. The heater does not operate when the wall thermostat is calling for heat.</p>	<p>A. Issue with wall thermostat or cable.            B. Low fuel level (low fuel light on).            C. Defective float switch or bad connection.            D. No power to heater.            E. No power to burner from Fan &amp; Limit switch.            F. Primary control locked out (red light on).            G. Defective primary control.            H. Bad burner motor or coupling.</p>	<ul style="list-style-type: none"> <li>• Ensure adequate fuel in the tank and no lights on primary control.</li> <li>• Jump T1-T2 on primary control to see if the burner will attempt to start. This bypasses the thermostat and float switch.</li> <li>• If burner starts:               <ul style="list-style-type: none"> <li>○ Check continuity through thermostat and float switch at red plug connected to side of burner. See wiring diagram.</li> </ul> </li> <li>• If burner does not start:               <ul style="list-style-type: none"> <li>○ Confirm power to heater (120V/60Hz) by pulling white knob on Fan &amp; Limit. Fan should come on.</li> <li>○ Check fuse on back side of wiring box.</li> <li>○ Confirm burner plug is installed properly in receptacle.</li> <li>○ Remove primary control from burner (leave wires attached). Check power to primary control with voltmeter.</li> <li>○ If primary has power but does nothing when T1-T2 is jumped, then it is defective.</li> <li>○ If pump motor spins, but burner motor does not, then test burner motor.</li> </ul> </li> </ul>
<p>2. The heater attempts to start but does not establish flame and locks out.</p>	<p>A. No spark or weak spark.            B. Incorrect air shutter setting.            C. Incorrect air pressure.            D. Oil not hot enough (preheater issue).            E. No oil spray (clogged nozzle, solenoid not opening, pump/suction issue).            F. Bad fuel.</p>	<ul style="list-style-type: none"> <li>• Follow procedure for priming fuel system (Section 5.4.1).</li> <li>• Confirm air shutter setting and air pressure on gauge (nominally 3 psi). Adjust as needed. To ensure the gauge reads properly, either pull up the vent plug on top or remove the vent plug on the back of the gauge (if still in place).</li> <li>• Check for good spark while priming.</li> <li>• If oil preheater is working properly, the fitting where oil enters burner should be warm.</li> </ul>

		<ul style="list-style-type: none"> <li>• If system is primed and still no spray, remove nozzle line assembly and clean nozzle and solenoid valve.</li> <li>• If can't find issue. Drain tank and reprime with #2 heating oil or diesel fuel.</li> </ul>
<p>3. The heater starts and establishes a flame, but only runs for about 30 seconds. Then it shuts down and locks out.</p>	<p>A. Primary control not sensing flame.  B. CAD cell dirty, defective, or not aimed properly.  C. Flame not bright enough.</p>	<ul style="list-style-type: none"> <li>• Start the burner. As soon as the flame is established, jump across the F1-F2 terminals on primary control. This bypasses the CAD Cell flame sensor. <ul style="list-style-type: none"> <li>○ If burner still shuts off and trips, primary control is defective.</li> </ul> </li> <li>• Disconnect the yellow CAD cell wires from F1-F2. Start the burner and put a jumper between F1-F2. <b>NOTE:</b> Make sure the flame is burning, so unburned oil is not spraying into the combustion chamber. Use a multi-meter to measure the ohms between the two CAD cell wires. Adjust the air shutter and air pressure to get the ohms as low as possible.</li> </ul>
<p>3. The heater starts and establishes a flame. It runs for several minutes. Then the flame goes out and the burner shuts down and then primary control locks out.</p>	<p>A. Air in the oil passages.  B. Vacuum leak on suction side of pump.  C. Pump or compressor coupling slipping.  D. Flame brightness is marginal (green light on primary control goes on and off repeatedly).  E. Improper draft.  F. One oil heater is not working properly.</p>	<ul style="list-style-type: none"> <li>• Confirm oil line fittings are tight.</li> <li>• Confirm couplings are not slipping.</li> <li>• Adjust flame to maximum brightness.</li> <li>• Confirm draft is correct after flue is warmed up.</li> <li>• Check pump and compressor gauges to see if there are changes over several minutes of operation.</li> <li>• After burner locks out, unplug the burner and quickly check to see if the nozzle block is hot.</li> </ul>
<p>4. The heater starts and establishes a flame. It runs for several minutes. Then the burner shuts off and after several minutes it starts up again on its own. (No primary control lock out.)</p>	<p>A. Fan &amp; Limit switch is short cycling power to the burner.  B. Thermostat being satisfied too quickly.</p>	<ul style="list-style-type: none"> <li>• Confirm the fan is operating properly. It should come on after the burner is on for a minute or two, and blow air out through the louvers.</li> <li>• Confirm Fan &amp; Limit is operating properly. Dial rotates as the cabinet heats up and cools down. The middle tab turns the fan turns on. The highest tab turns the burner off.</li> <li>• Move thermostat to a better location. No hot air blowing on it.</li> </ul>


# 8. Appendices

## 8.1 Wiring Diagrams

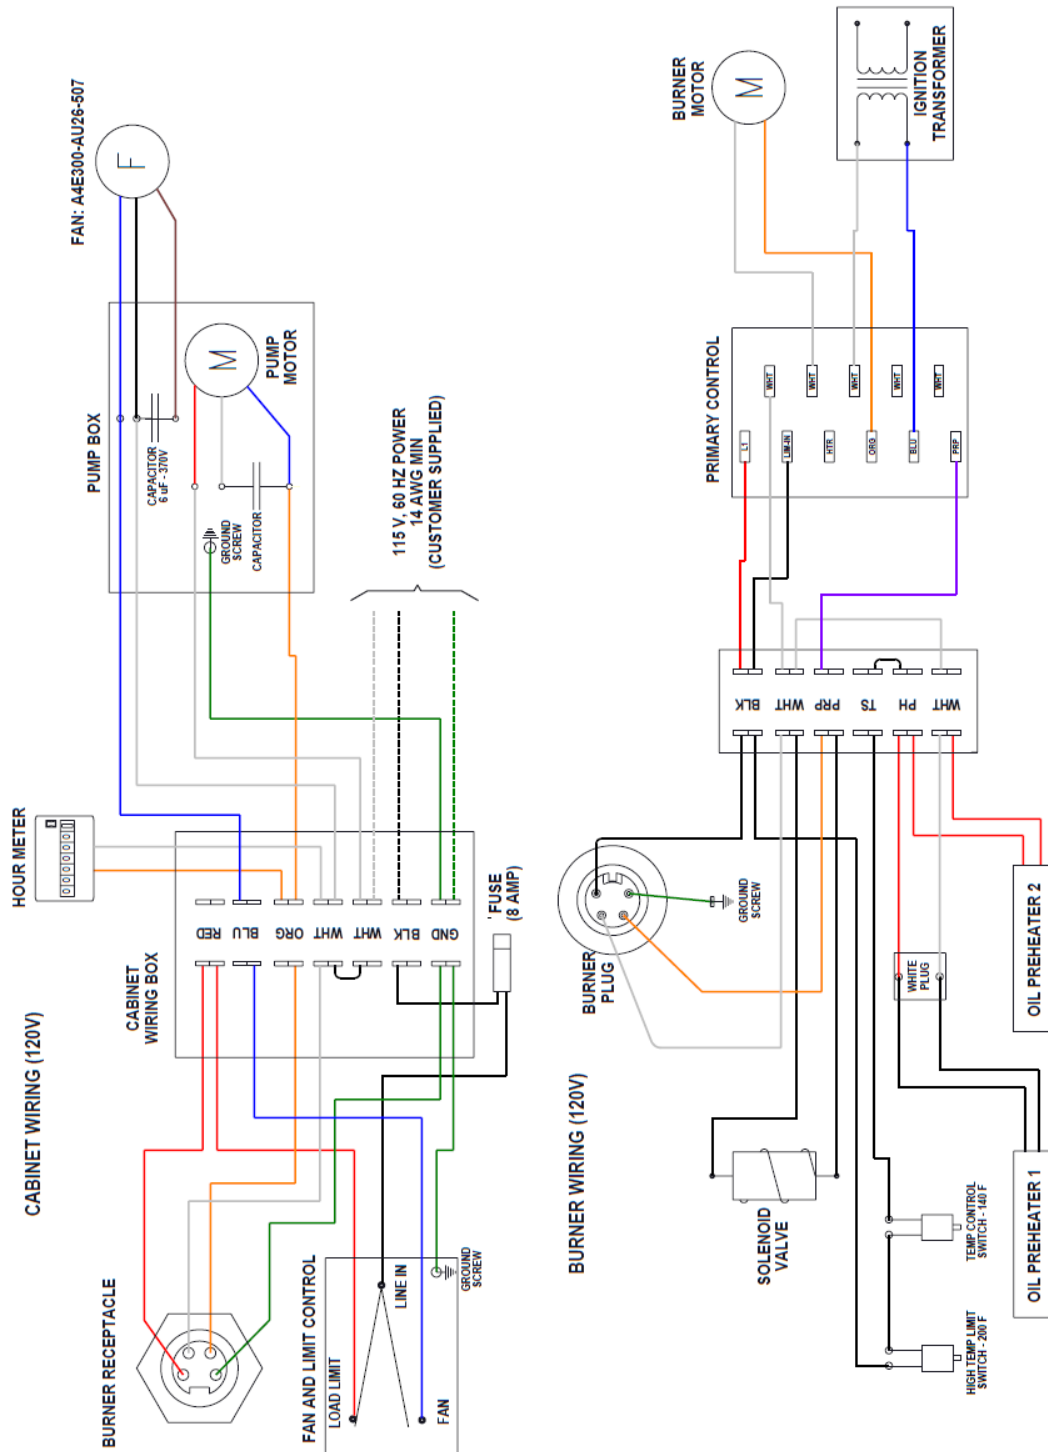

ITEM: 98120083 - WIRING DIAGRAM, 75H (REV B - CARLIN PRIMARY CONTROL) RELEASED: 03/11/2021


# LOW VOLTAGE WIRING

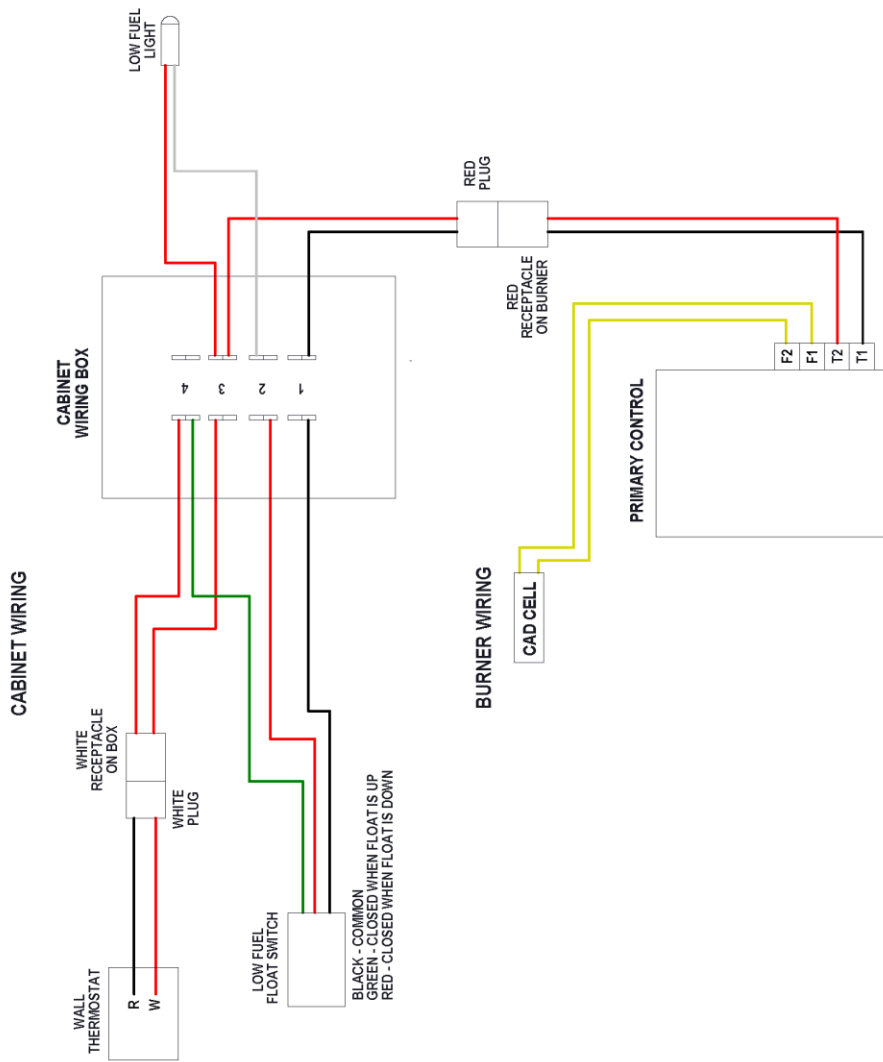


ITEM: 98120083 - WIRING DIAGRAM, 75H (REV B - CARLIN PRIMARY CONTROL) RELEASED: 03/11/2021



# 120V WIRING

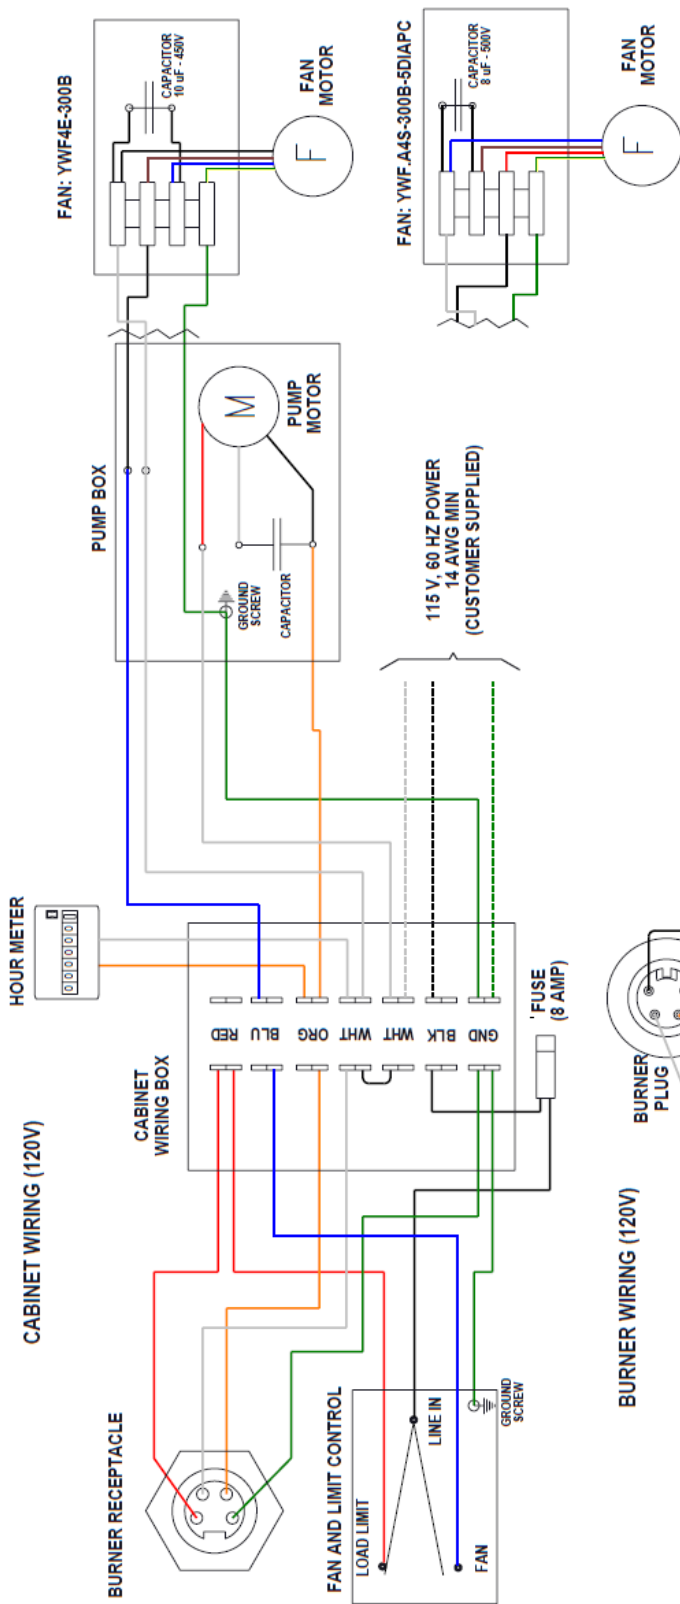

# BURNER WIRING (120V)

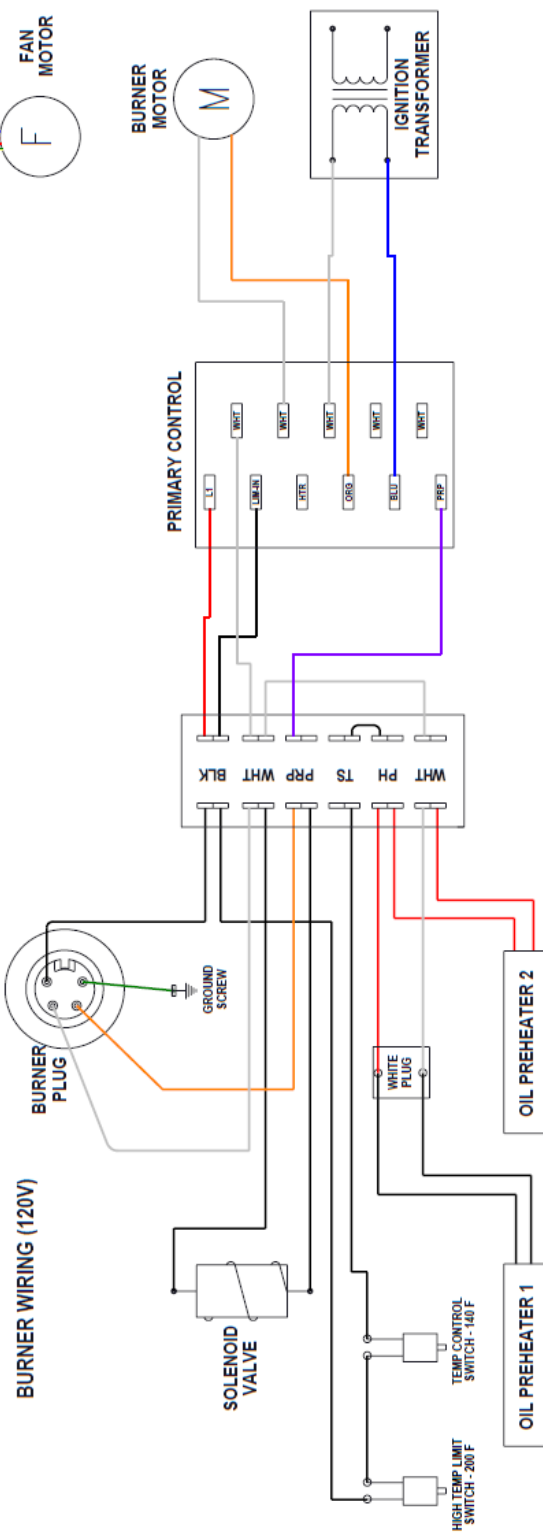

ITEM: 81011141 - WIRING DIAGRAM, 75 HEATER, ALTERNATE FANS RELEASED: 12/01/2022

## 8.2 Primary Control Instructions



# Carlin<sup>®</sup>

Combustion Technology

## Model 60200 CAD Cell Oil Primary Control Data Sheet



- **Oil Pump Bleed Assist**  
60 seconds
- **CAD Cell Resistance Monitoring Jack**  
Works with any multimeter
- **Recycle on Flame Failure**
- **Serviceman Reset Protection**  
Latch-up after 3 consecutive lockouts
- **Diagnostic LEDs**  
Status, lockout, flame
- **15-second, 30-second TFI**

- **Increased Flame Accuracy**
- **Thermostat/Aquastat Compatible**
- **Improved SMC Technology**  
Zero bleed voltage during standby
- **Works Well with Generators**  
Insensitive to frequency changes
- **Early Spark Termination (optional)**
- **Alarm Contacts**
- **Flame Signal Test Jack**

Power input (red/white wire)	120 VAC, 60 HZ, 9VA
Limit circuit input (black wire)	120 VAC, 60 HZ
Motor load	10 FLA / 60 LRA
Ignitor load	120 VAC, 60 HZ, 500 VA
Valve load	120 VAC, 60 HZ, 6FLA/36LRA
Alarm contacts	24 V, AC/DC, 2A

Nozzle Line Heater	120 VAC, 60 HZ, 1 amp
Operating temperature limits	+32°F to +140°F
Storage temperature limits	-40°F to +185°F
Thermostat anticipator current	0.1 A, AC
CAD cell resistance (with flame)	R < 1500 OHMS
Agencies	UL recognized (US & Canada)

### Installing and Wiring

**⚠ WARNING** The 60200 control must be installed and serviced only by a qualified service technician.

1. Always disconnect power source before wiring to avoid electrical shock or damage to the control. All wiring must comply with applicable codes and ordinances.
2. Thermostat terminals (T-T) provide a current source. Never apply external power to these terminals under any circumstances.
3. Alarm terminals provide a 24 VAC/VDC-rated dry contact.

#### Mounting

- The control may be mounted on a 4" x 4" junction box in any convenient location on the burner, furnace or wall. The location must not exceed the ambient temperature limit, 140°F.

#### Wiring


- Wiring must comply with local and national electrical codes, and with the wiring diagram.
- Individual or bundled neutrals may be attached to any L2 terminal.










#### Field checks

1. **Safety timing (TFI) test** – Remove one CAD cell wire (F-F). Start burner. The control should lockout within the TFI time limit. Replace CAD cell wire.
2. **Flame failure test** – Start burner. After flame is established (after TFI period), close the oil supply hand valve. This will cause a flame failure sequence as described in the Startup & Operation section of this Data sheet. The control should recycle (restart after 65 seconds).
3. If control does not operate as described, check the wiring.

### Startup & Operation

**⚠ WARNING** Do not start the burner if the combustion chamber contains oil or oil vapor.

**NOTICE** Per UL requirements, the control will not turn on if the CAD cell senses flame during the self-test. If the CAD cell sees light (flame) at the beginning of a cycle, the control will remain in self-test mode until the CAD cell no longer senses light (flame). The amber LED will blink momentarily  every 3 to 4 seconds and green LED will be on or flashing.


Model 60200 Diagnostic LEDs		
 – Amber OFF	 – Amber ON	 – Amber FLASHING
 – Green OFF	 – Green ON	 – Green FLASHING
 – Red OFF	 – Red ON	 – Red FLASHING

SEE WIRING DIAGRAM ON NEXT PAGE

Tech Support (800) 989-2275

[www.carlincombustion.com](http://www.carlincombustion.com)

## Wiring

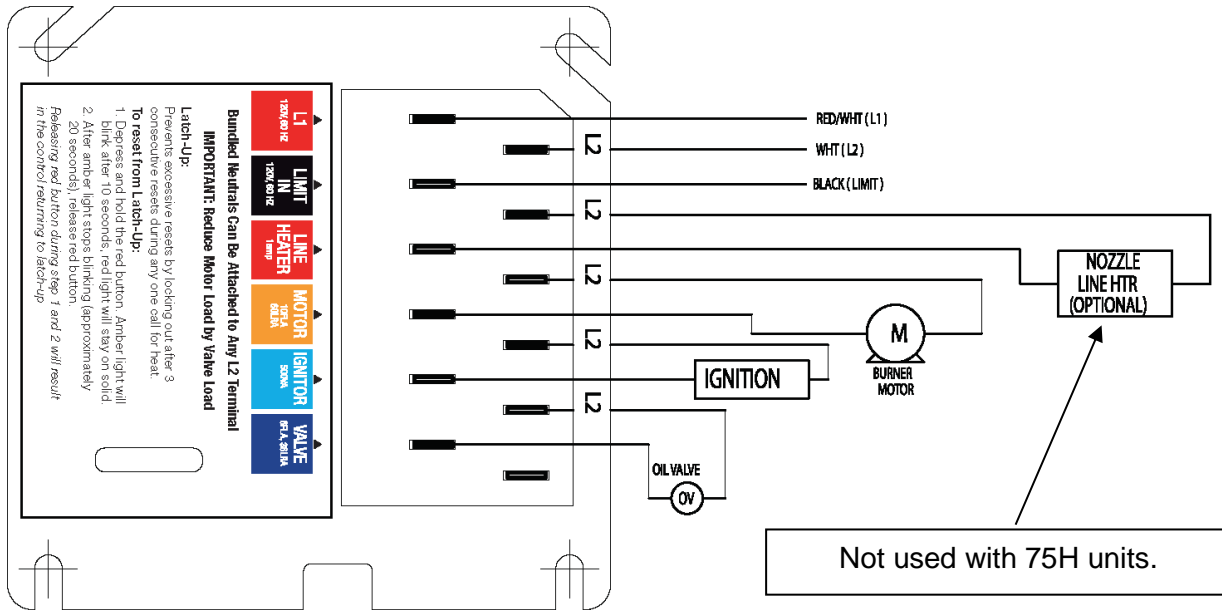

## Startup & Operation (continued)

- (A)(G)(R) Power ON** Open all manual oil line valves. Close the line switch. (If Red LED turns on constant **(A)**, control is in lock-out. See next page to reset.)
- (A)(G)(R) Self-test 1** The control performs a “boot-up” test to verify internal operation each time power is applied to the L1 wire. The amber LED turns on and the test continues for about 5 seconds. If the test fails, the control turns the amber LED off and repeats this test sequence until successful.
- (A)(G)(R) Stand-by** (No call for heat) If Self-test 1 is successful, amber LED turns off and control waits for heat call.
- (A)(G)(R) Call for heat** Set thermostat to call for heat. Thermostat circuit must be closed and black wire must receive power from the limit circuit.
- Self-test 2** If a failure occurs in this self-check, the control won’t start and the amber LED blinks 1 second on, 4 seconds off, until serviced or the problem clears. These failures include CAD cell seeing light, valve lead voltage on too early, internal fault, or line voltage <90 V. See service section.
- (A)(G)(R) Burner on** After the self-test, amber LED turns off. The ignitor starts, followed 2 seconds later by the motor.
- (A)(G)(R) Valve delay ON** The oil valve opens after the valve delay-on period (pre-purge). (For oil valve delay on operation, wire oil valve to the violet lead. If not using an oil valve, cap the violet lead to automatically disable pre-purge and post-purge).
- (A)(G)(R) Pump Prime** To enter pump prime: 1. Start a CFH cycle. During Pre-Ignition or Valve Delay On, press Reset until motor turns off (10 seconds), then release the button. When motor turns back on, within 5 seconds, press the Reset button until the amber LED starts to flash. You are in Pump Prime, release Reset button.  
*Optional Pump Prime notes:* 1) If lost, press Reset for 1 second and release, then if the control is not in Pump Prime, restart the sequence. 2) If Reset is released before end of first 10 seconds, the control returns to Standby and restarts another CFH cycle. 3) If reset is not pressed the second time, a normal CFH cycle will continue. 4) If motor and igniter are on and amber LED is flashing, the control is in Pump Prime. 5) Pump Prime will exit standby if flame is detected, or 60 seconds has elapsed, or loss of TT or Limit, or Reset button is pressed.

## Startup & Operation (continued)

- (A) (G) (R) TFI** The CAD cell must sense flame within the TFI time limit (trial for ignition). Insufficient flame puts control into lockout.
- (A) (G) (R) Run** The burner continues firing during call for heat if the CAD cell is sensing flame. Only the green LED is on during normal running.
- (A) (G) (R) Lockout** If CAD cell does not sense flame within the TFI time limit after the burner starts, **lockout** occurs. The control turns the red LED on constant and closes the alarm contact.
- To Reset** Push in and hold reset button for 2 seconds, then release.
- (A) (G) (R) Latch-up** If the control locks out 3 times during a single call for heat, latch-up occurs. The control turns on both the amber and red LEDs constant. You must use the special procedure below to reset the control after latch-up.
- ⚠ WARNING** **Reset after latch-up:** only a qualified service technician should attempt to reset the control after latch-up. The problem that caused the repeated burner lockouts must be corrected before returning the burner to normal operation.
- (A) (G) (R)** Push in and hold the reset button for 10 seconds. The amber LED will begin to flash.
- (A) (G) (R)** After the LED begins flashing, continue holding the reset button for 20 seconds. The LEDs will turn off. Release the reset button and the control will restart (releasing the button before the LEDs turn off will cause the control to remain in latch-up).
- NOTICE** The 60200 control will not reset from lockout or latch-up if power is interrupted.
- (A) (G) (R) Flame failure** If the CAD cell loses flame signal during operation (after the TFI), the red LED flashes. The burner shuts off within 2 seconds. **Recycle:** Control waits for 65 seconds (with red LED flashing), then begins again at Self-test 2. Red LED goes off.
- (A) (G) (R) NOTICE** If the green LED is blinking during a run, the flame is weak or unstable which may cause recycle.
- (A) (G) (R) Motor delay OFF** Set thermostat (or Aquastat) to stop call for heat. The oil valve (if installed) will turn off within 2 seconds. The motor remains on for the motor delay off period (post-purge), then turns off. (If no oil valve is wired to the control, the burner shuts off within 2 seconds after end of call for heat. There is no post-purge.)
- (A) (G) (R) Stand-by** Control remains in stand-by mode until limit circuit sends power to the black wire and thermostat circuit closes (call for heat).

No latch up with 75H units.

## Service & Troubleshooting

### Burner (control) will not come on



#### No power to control

- Check limit circuit to the control (at least 102 VAC).
- Check all electrical connections.



#### Control is in lockout

- Red LED will be on. Press the reset button for 2 seconds.



#### CAD cell seeing light

- Green LED on, and amber LED blinking 1 second on, 4 seconds off. Remove one yellow lead from FF terminals, and the flame test plug.

If the amber LED remains flashing and green LED on, the control is defective.

If the amber and green LEDs go OFF, the control is OK, and;

- light is leaking into the burner housing, or
- CAD cell is defective, or
- There is a problem with the CAD cell wiring or holder.
- If appliance was recently shut down, CAD cell may see residual hot spots in chamber.

#### To troubleshoot:

- Check CAD cell by plugging a 3.5mm mono plug into the CAD jack after entering TFI, or before a call for heat (for dark chamber checks). Attach the plug to a multimeter to monitor CAD cell resistance. Dark resistance should be over 50K OHMS, and room light resistance (control flipped open) should be at most 10K OHMS. Replace cell if necessary, or reinstall and close the burner housing.

**NOTICE** Control will not start if the plug is inserted. Also, if the plug is inserted more than two minutes, the control goes to Standby.

- Check for stray light by measuring the CAD cell resistance looking into the inactive combustion chamber. It should read at least 50 kohms.

### Other no-start problems

If the CAD cell is OK, and the amber LED still blinks 1 second on, 4 seconds off, the other possible failures include:

- Valve lead voltage on too early. *Correct bad connection.*
- Line voltage <90 VAC (amber LED flashes uniquely, 1 second on, 1/2 second off, 1 second on, 3 seconds off, then repeats).
- Internal fault. If valve has no voltage, and line voltage OK, the issue may be an internal fault. *Replace the control.*

### Repeated flame failures ( flashing red LED)

Check for:

- CAD cell is defective. *Replace.*
- Air leaking into oil line causing flame out. *Check oil line connections and filter gasket.*
- Defective nozzle causing flame to be erratic. *Change nozzle.*
- Excessive airflow or draft causing flame to leave burner head. *Check for proper air band setting and draft.*
- Excessive back pressure causing flame to be erratic. *Check appliance and flue for sooting/plugging.*

### Control locks out after TFI ( red LED on)

Check for:

- No oil to burner. *Check oil supply, filters, lines.*
- Shorted electrodes. *Inspect for cracked porcelain and replace as needed.*
- Poor spark. Check electrode spacing and condition per burner manual. *Replace or realign if necessary.*
- Nozzle clogged. *Replace nozzle.*
- Airflow too high. *Check air band setting.*
- Ignitor module defective. *Replace if no spark.*
- CAD cell defective
- Oil valve (if used) stuck in closed position.
- Check wiring connections.



### Blinking Green LED

- Weak or unstable flame.
- Check ohms.
- Check CO<sub>2</sub> level.

#### NOTICE

**FROZEN PIPES/WATER DAMAGE:** This is not a freeze protection device. Suitable freeze protection monitoring or other precautions are recommended to protect against ruptured pipes/water damage caused by fuel outage, safety related fault conditions, or equipment failures.

## 8.3 Chimney Flue Installation Instructions

# Flue Installation Instructions

(Kit #: 81010010 - Thru the Roof, Rubber Boot)

These instructions describe how to install the flue kit directed vertically from the heater outlet directly through the roof (up to 16' from floor) and supported on the exterior by the roof. If your installation situation differs (such as flue passing through ceiling or attic space, non-vertical segments, or interior support required) please contact Technical Support for additional parts and installation instructions. Refer to the diagram on page 4 for the parts supplied.

Please read and understand the Installation and Operation Manual that was provided with your heater completely before attempting to install or operate your equipment.

**WARNING:** Flue installation should only be attempted by qualified personnel. Use appropriate equipment and safety measures when working at heights.

**If you need to run your flue through the wall, rather than through the roof as shown in these instructions, a thru-the-wall flue kit will be required. If you did not purchase one, please contact technical support to order the additional parts needed.**

### *INSIDE*


1. Locate the heater on the floor and ensure a minimum clearance of 6 inches between the back of the heater cabinet and the wall. Ensure there is a clear path from the exhaust outlet on top of the heater to the roof. NOTE that there must be 18 inches of clearance between single wall (black pipe) and anything combustible, and 2 inches of clearance between double-wall pipe and anything combustible.

### *OUTSIDE (ON ROOF)*

2. Confirm that there are no obstructions in the area where the flue will exit the building. Ensure there are no vents or air intakes near the flue exit location that could draw exhaust into the building. NOTE that the flue must extend 2 feet higher than anything within 10 feet of it.

### *INSIDE*

3. Using a plumb line, locate the point on roof directly vertical from the exhaust outlet on the heater. Drill a pilot hole through roof. If the roof has ridges, try to center on a ridge or between two ridges.

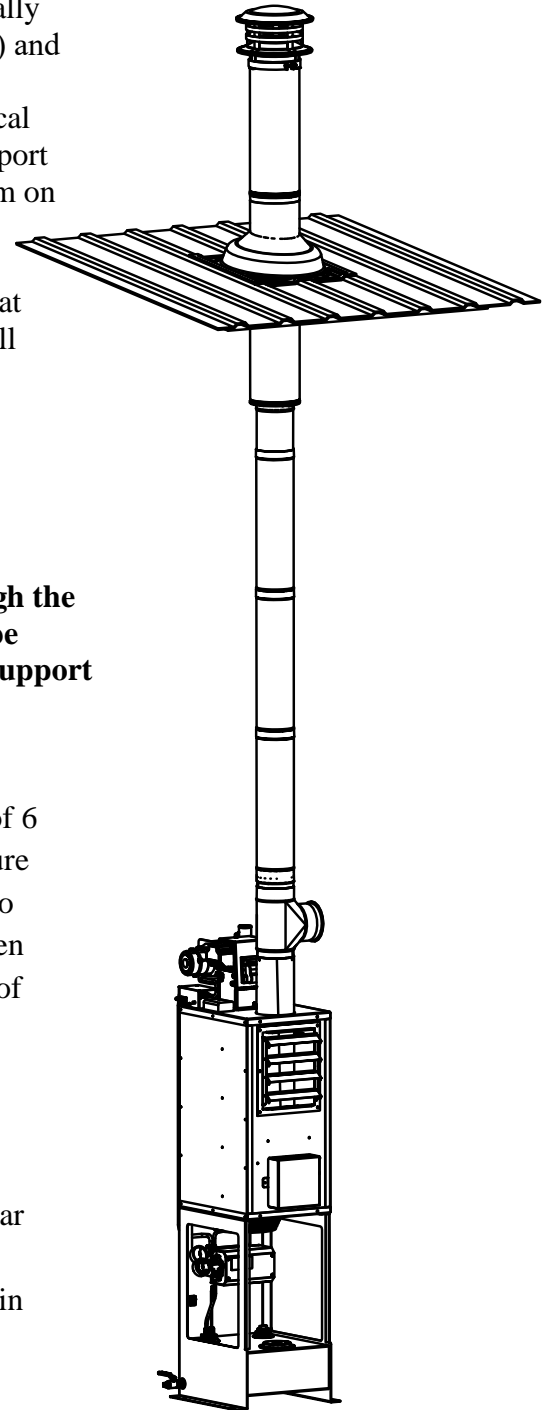


4. Move or cover the heater and any other equipment that might be damaged by falling debris when the hole in the roof is cut.
5. Cut back the roof insulation to allow at least 2 inches of clearance around the double-wall pipe. Due to the slope of the roof, the cut will be an oval, rather than just a circle. Use the 2" Clearance column in the table below to determine the proper dimensions of the oval. **NOTE:** The roof slope is measured in inches of vertical rise per foot of horizontal run (i.e., "0-12" is a flat roof and "12-12" is a roof with a 45 degree slope).

Roof Slope	Width x Height of Oval to Cut	
	10 x	12 x
0-12	10.0	12.0
1-12	10.5	12.0
2-12	10.5	12.5
3-12	10.5	12.5
4-12	10.5	13.0
5-12	11.0	13.0
6-12	11.0	13.5
7-12	12.0	14.0
8-12	12.0	14.5
9-12	12.5	15.0
10-12	13.0	16.0
11-12	13.5	16.5
12-12	14.5	17.0
Applies	6" DW Flue 1" Clearance	6" DW Flue; 2" Clearance

***OUTSIDE (ON ROOF)***

6. Locate pilot hole in roof and cut an oval hole around it (refer to chart above for hole sizing on sloped roof). **NOTE:** For a metal roof, use the 1" Clearance column. For a combustible roof, use the 2" Clearance column.
7. Loosely assemble Roof Mount Bracket per the instructions included with it. Slide the 3-foot long, double-wall pipe through band on bracket, so band is 12 inches from male end of pipe, with "L" brackets towards female end. Tighten band so pipe is locked in place. Leave nuts for the "L" brackets a little loose, so the angle can be adjusted. [NOTE: The bracket can also be flipped and mounted to structure underneath the roof from the inside.]
8. Insert the female end of the pipe through the hole in the roof and lower it down so the bracket rests on the roof.
9. Align the bracket over the hole, with the "L" brackets running up/down the roof, and secure it to the roof with the provided self-drilling screws, or with appropriate fasteners for the roof material.
10. Install the 2-foot long, double-walled pipe onto the 3-foot long pipe. Twist to lock into place.
11. Use a level to ensure the pipe is vertical and tighten the nuts on the "L" brackets to lock the angle.

12. Trim rubber boot to correct size according to markings on boot and double-wall pipe size. **NOTE:** 6-inch double-wall pipe has an outer diameter of 8 inches.
13. Slide boot over pipe and down onto roof.
14. Liberally apply sealant under base perimeter of boot. Form boot to roof surface and screw metal-lined edge to roof using remaining self-drilling screws evenly spaced (or appropriate fasteners for roof material.)
15. Apply sealant all the way around the top of boot.
16. **NOTE:** Top of piping must be at least 3 feet higher than roof where exited and at least 2 feet higher than any portion of roof within 10 feet. Additional pipe sections may be purchased to extend the pipe higher if required. If going over 5 feet above roof, as extended roof support should be added (part # 4913).
17. Install rain cap to top of pipe. Twist to lock in place.

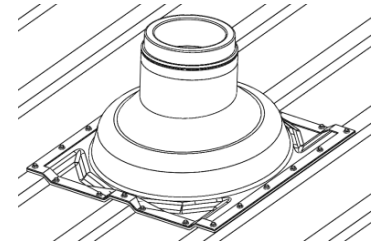


**Rubber**

### ***INSIDE***

18. Relocate or uncover heater. Install tee and draft control, crimped side down, into exhaust outlet on top.
19. Install crimped to black pipe adapter into tee.
20. Install single-wall black pipe up to near the end of the double-wall pipe. **NOTE:** Single-wall pipe must have a minimum clearance of 18 inches from any combustible materials. Also, single-wall flue piping should never be used on the exterior of building.
21. Install slip connector into last piece of black pipe.
22. Slide firestop plate over double-wall pipe and against roof. Secure in place with sheet metal screws into double wall pipe.
23. Install finishing collar into end of double-wall pipe, twist to lock in place.
24. Slide slip connector up and secure to the finishing collar with three sheet metal screws.
25. Ensure piping is vertically level and secure tee, adapter and black piping at each joint with at least three sheet metal screws.



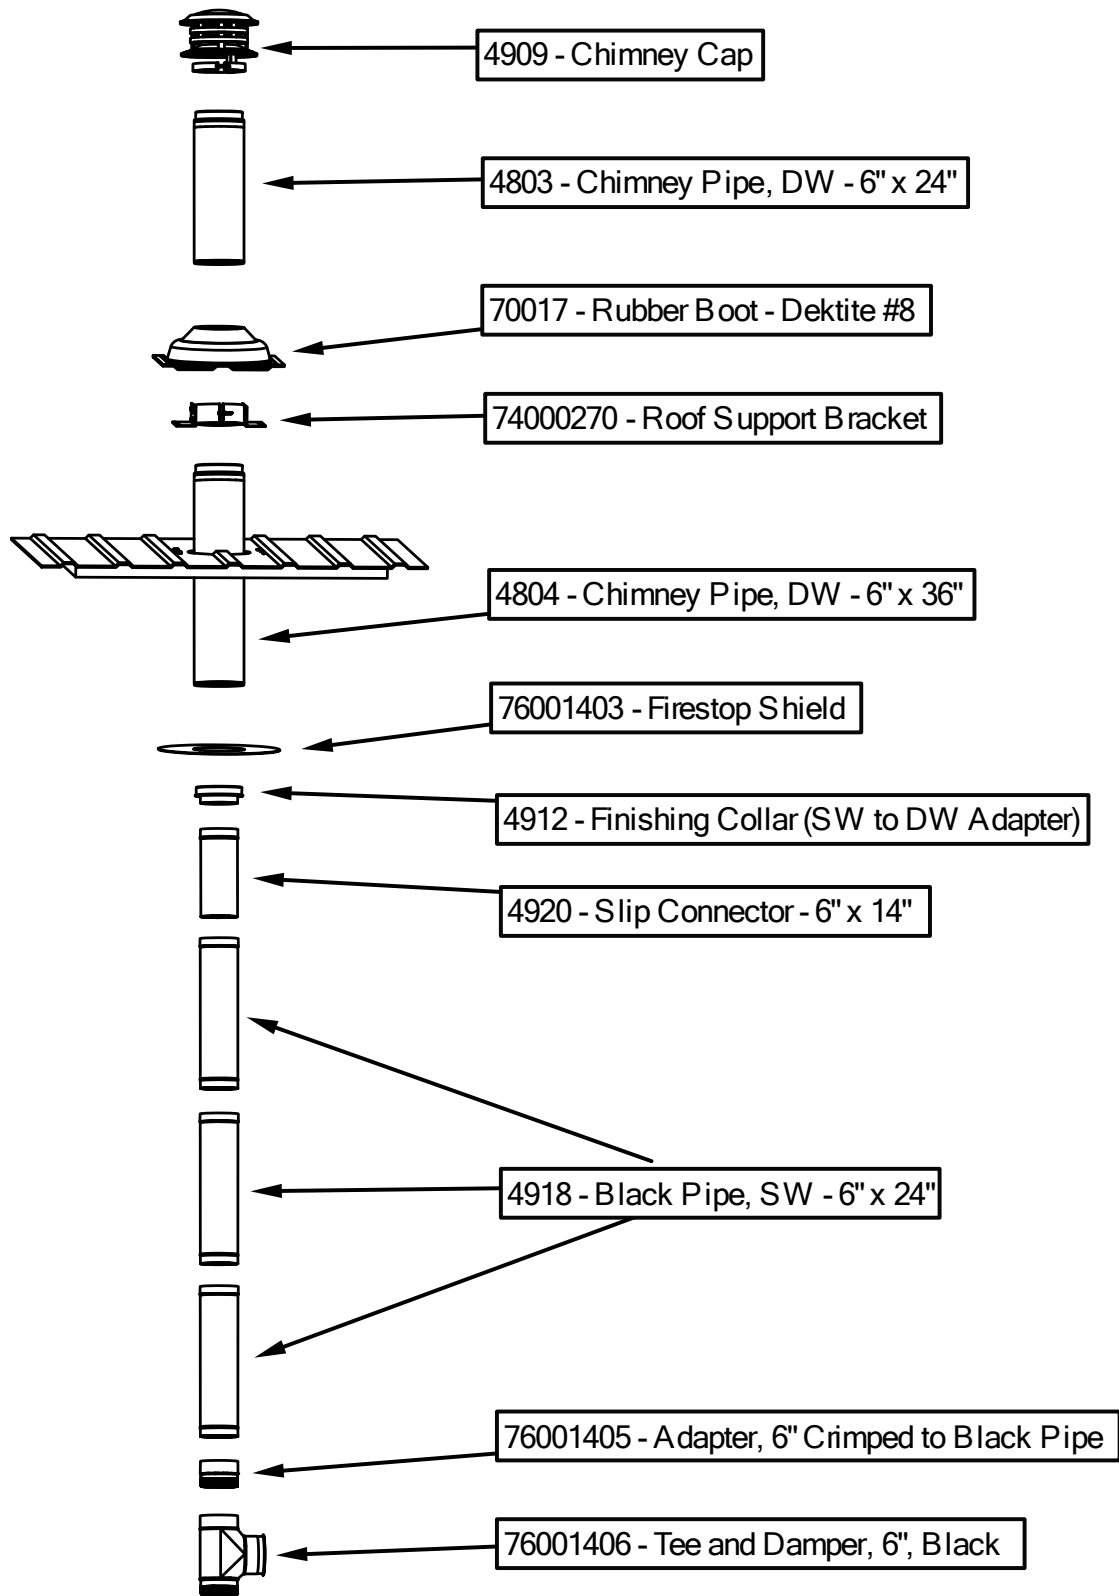

## 8.4 Heater Specifications

<b>Multi-Fuel Burning Appliance</b>	
<b>Model Number</b>	75H
<b>Bonnet Capacity Output</b>	58,922 BTU/Hour (17.3 kW)
<b>Fuel Input</b>	0.54 GPH (2.0 L/hr)
<b>Nozzle Only</b>	30609-11
<b>Approved Fuels</b>	ASTM D396 No. 2 Fuel Oil, Used Crankcase Oil, and Used Automatic Transmission Fluid
<b>Designed Outlet Air Temperature</b>	250°F Maximum (121°C)
<b>Tank Capacity</b>	10 Gallons (Approx. 7 Usable) (38 L)
<b>Flue Draft</b>	-0.04" WC (Minimum 10' Stack) (10 Pa)
<b>Atomizing Air Pressure</b>	3 - 4 PSI (20.7 - 27.6 kPa)
<b>Fan Size</b>	13" (33 cm)
<b>Flue Size</b>	6" (15 cm)
<b>Unit Heater</b>	No Ductwork
<b>Fuse Size</b>	8A (15A Max)
<b>Burner Motor</b>	1/7 HP (106 W), 115V/60Hz, 3450 RPM, 1.5A
<b>Metering Pump Motor</b>	15 Watt, 115V/60Hz, 0.3A
<b>Ignition Transformer &amp; Control Circuit</b>	115V/60Hz, 1.0A
<b>Oil Preheaters</b>	115V/60Hz, 3.0A Maximum
<b>Heater Weight (Tank Empty)</b>	210 lbs (95 kg)
<b>Heater Dimensions</b>	75"H x 21"W x 26"L (190 x 53 x 66 cm)
<b>Minimum Clearance to Combustible Surfaces</b>	Top - 18" (46 cm) Front - 24" (61 cm) Sides - 18" (46 cm) Rear - 6" (15.2 cm) Flue Pipe - 18" (46 cm)
For commercial and industrial use only.	
The heater should not be used in buildings where explosive vapors may be present.	
The heater should be mounted to non-combustible flooring.	

## 8.5 75H Heater Maintenance Schedule and Log

Location: \_\_\_\_\_

Have this record available when calling for support.

Unit ID: \_\_\_\_\_

Service	Schedule	Initial and Date of Service:				
Clean ash from heat exchanger, flue, damper, and draft gauge probe	Every 1,000 hours of operation or Annually					
Remove and clean in-tank fill strainer	As needed.					
Drain fluid (water) from bottom of tank	Check monthly, drain as necessary.					
Remove and clean in-tank fuel pickup strainer	As needed - indicated by vacuum gauge.					
Clean fuel tank	As needed or required by code.					
Clean fan	Annually					
Clean nozzle line assembly	Annually					
Check retention head & electrode settings	Annually					
Clean solenoid valve	Annually					
Check air compressor pressure performance, replace filter.	Annually					
Clean cad cell lens	Annually					
Check/replace burner gasket	Annually					
Test fire furnace after maintenance and check for proper burner adjustment	After Annual Maintenance					
Gauge Readings (After Maintenance)	Pump Vacuum Reading:					
	Pump Pressure Reading:					
	Draft Gauge Reading:					
	Hour Meter Reading:					

Service Company: \_\_\_\_\_

Contact: \_\_\_\_\_

Address: \_\_\_\_\_

Phone: \_\_\_\_\_

\* This schedule is the minimum recommended. If you see smoke or have trip-outs then the unit must be shut down and serviced immediately. Increase the maintenance as your situation requires.

## 8.6 Limited Warranty

**EnergyLogic, LLC, MANUFACTURER**, warrants to the buyer that **MANUFACTURER**'s heater be free from defect in material and workmanship according to the provisions and limitations set forth herein for a period of one (1) year from the Effective Date (as defined below) or 1,500 hours of operation, whichever occurs first. The buyer is responsible for registering the unit with the **MANUFACTURER**. If the unit is not registered, the buyer is responsible for maintaining proof of the purchase date of the unit. The warranty coverage period begins on the date (the "Effective Date") of purchase, as established by the buyer, or otherwise on the date of manufacture as indicated by the serial number. *No warranty claim examination shall commence until the unit is registered with the MANUFACTURER.*

Non-consumables or parts that are not associated with a maintenance service interval because of normal wear shall be warranted for a period of one (1) year from the Effective Date or 1,500 hours of operation, whichever occurs first. A second year will be activated when the product is registered with the Manufacturer within the first 30 days of receipt of the Product.

Parts replaced during the original equipment warranty period as detailed herein shall carry either a one (1) year warranty from the date of purchase or the remainder of the factory warranty for the original equipment, whichever occurs last. In no event shall a part replaced under the original warranty carry a warranty that extends beyond one year from the expiration of the original factory warranty period.

### Warranty Exclusions:

1. Consumable parts or any part that is associated with a normal maintenance interval because of normal wear and tear (filters, seals, gaskets, air compressor vanes, batteries, insulation, heater cabinets).
2. Products or parts which are not maintained in accordance with the service frequency and methods described in the **MANUFACTURER'S** instructions furnished and / or available upon request from the buyer.
3. Parts and products that are not installed and operated according to **MANUFACTURER'S** instructions furnished and / or available upon request from the buyer.
4. Repairs made with parts or accessories which are not genuine EnergyLogic LLC or EnergyLogic LLC approved
5. Installations not in accordance with Manufacturers Installation Manual, UL, NFPA guidelines, federal, state, and local codes and regulations.
6. Labor or other costs incurred in troubleshooting, repair, removal, transportation, installation, service or handling of parts.
7. Claims, representation, or warranty made by any dealer, distributor, or other person that is inconsistent with or is more expansive than the provisions provided herein.
8. Parts that are altered from original specifications of the **MANUFACTURER** or are damaged because of misuse, improper handling, storage, or use in conjunction with other parts not authorized by **MANUFACTURER**.
9. Products that have been moved from the original installation site or that have been sold or exchanged to a person other than the original buyer.
10. Equipment or products installed outside of the continental U.S. or Canada.
11. Products or parts in which the serial number has been altered, defaced, or removed.

The buyer must assist the **MANUFACTURER'S** Technical Support group during over-the-phone problem diagnosis in order to help substantiate a warranty condition. A course of action will be determined by the **MANUFACTURER** if repair or replacement is deemed necessary.

**MANUFACTURER'S** liability under this warranty shall be limited to the repair or replacement of any part or parts that may prove to be defective under such normal operation and use, subject to **MANUFACTURER'S** examination and determination to its satisfaction that such part or parts are so defective.

### Obtaining Warranty Service:

If the local Service Provider is unknown, contact **EnergyLogic, LLC** at 4109 Capital Circle, Janesville, WI 53546, or at **1-615-471-5290**. A representative will assist you in locating the nearest authorized service provider or in verifying the warranty coverage. The Unit Registration identification number will be required. Please refer to our website at [www.energylogic.com](http://www.energylogic.com) for more information.

In order for a warranty claim to be acknowledged by the **MANUFACTURER**, the buyer must be issued a Return Authorization (RA) number and the product must be Warranty Registered. After obtaining an RA number, the buyer must properly package the part to avoid damage during shipment with the RA number visible on the outside of the box. A credit card number must be provided in order for the replacement part to be shipped and the part must be returned within 30 days of receipt of the replacement part in order to avoid charges.

If **MANUFACTURER** determines that a problem with a product or part is not covered under the Limited Warranty, the buyer will be notified and informed of service alternatives available on a fee basis.

**DISCLAIMER AND LIMITATION OF DAMAGES:** THIS LIMITED WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, TO THE EXCLUSION OF ANY AND ALL OTHER WARRANTIES OR REPRESENTATIONS THAT MAY BE EXPRESSED OR IMPLIED BY ANY LITERATURE, PACKAGING, SAMPLES, MODELS, DATA OR PERSONS. MANUFACTURER DOES NOT ASSUME, NOR DO WE AUTHORIZE ANY EMPLOYEE, AGENT, OR OTHER PERSON TO ASSUME FOR US, ANY OTHER RESPONSIBILITY OR LIABILITY IN CONNECTION WITH THE SALE OF THE GOODS COVERED HEREBY. **MANUFACTURER HEREBY DISCLAIMS ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE.** MANUFACTURER'S MAXIMUM LIABILITY HEREUNDER SHALL NEVER EXCEED THE COST OF THE PRODUCT. MANUFACTURER IS NOT RESPONSIBLE FOR OR LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL OR PUNITIVE DAMAGES RESULTING FROM THE USE OF THE GOODS COVERED HEREBY OR ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO CONTRACT, TORT, NEGLIGENCE, STRICT LIABILITY, LOST PROFITS OR GOODWILL, LOSS OF TIME, INCONVENIENCE, LOST FUEL, LOST SAVINGS, LABOR CHARGES OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES WITH RESPECT TO PERSONS, BUSINESS OR PROPERTY WHETHER AS A RESULT OF BREACH OF WARRANTY OR OTHERWISE. THIS WARRANTY IS LIMITED TO THE PRECISE TERMS SET FORTH ABOVE, AND PROVIDES EXCLUSIVE REMEDIES EXPRESSLY IN LIEU OF ALL OTHER REMEDIES.